


BAND RECORDER PHILIPS NR4407

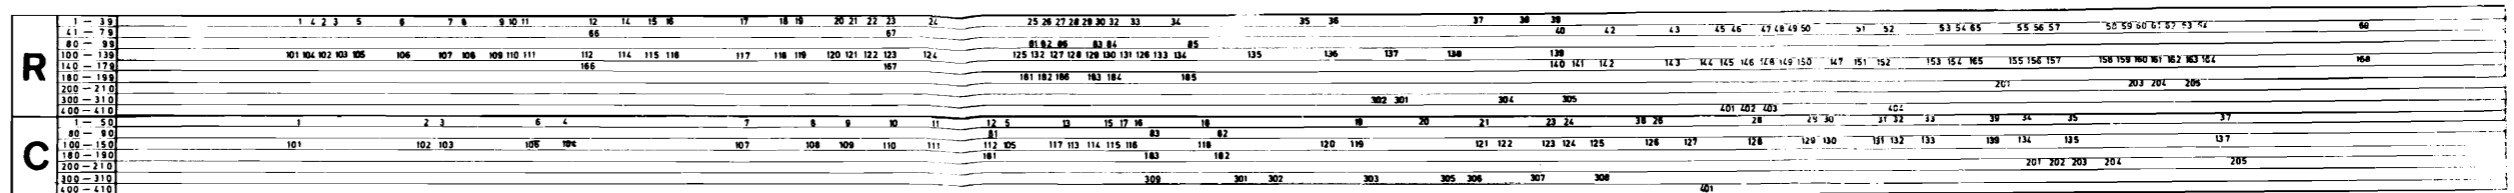

Sk 1	
closed contact at	
recording	playback
1-6	2-4-8
4-5	11-19
7-9-10-14	15-16
11-12	18-20
17-23	21-23
18-22	26-28
19-21	
20-24	
25-26-27	


Sk 101	
closed contact at	
recording	playback
101-106	101-103
104-105	102-104-108
107-110-114	111-119
111-112	115-116
117-123	118-120
119-122	121-125
120-124	121-123
119-121	127-128
126-128	

Sk 2		
closed contact at		
4.75 cm/s	9.5 cm/s	19 cm/s
205-211	203-205-209	201-205-207
206-212	204-206-210	202-206-208
213-215-217	213-217	
214-216-218	214-218	

Sk 3	
closed contact at	
forward	stop
301-303	303-306-307
302-308	
304-305	

Sk 4			
closed contact at			
2-3	1-4	stereo	parallel
401-403	401-403	403-408	401-403
402-404	402-404	404-408	402-404
410-412	411-413	407-408	
411-413	412-414	409-410-411	
416-418	415-417	412-414	415-417
419-421	416-418	415-417	
420-422	421-422	421-422	
425-427	423-425	423-425	
426-428	424-426	424-426	
	427-429	427-429	
	428-430	428-430	
	431-432		

Sk 6		
closed contact at		
multiplay	normal	duoplay
602-604	601-608	602-604
603-607	615-618	603-607
605-606		605-606
609-613		609-613
610-612		

 

Sk	function
0	mains switch
1	rec/play-switch left
101	rec/play-switch right
2	speed selector
3	forward switch
4	track selector
5	voltage adapter
6	multiplay - duoplay
7	loudspeaker switch

