


PHILIPS



servicegegevens

22 RB 382

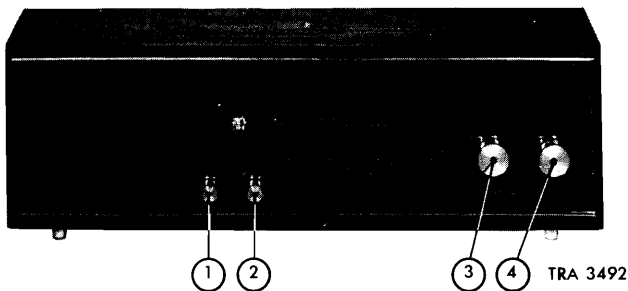


BEDIENINGSORGANEN

- | | | |
|---|--------------------------|--------------|
| 1 | Geluidssterkte + aan/uit | (R25 + SK-1) |
| 2 | Klank | (R29) |
| 3 | Golfgebied + PU | (SK-2, 3) |
| | I FM | |
| | II Kortegolf | |
| | III Langegolf | |
| | IV Middengolf | |
| | V PU | |
| 4 | Afstemming | (C16, 23 AM) |
| | | (C7, 12 FM) |

CODENUMMERS

Kast (noten)	4822 425 50067	S6, 7, 8, 9	4822 156 70032
Kast (palissander)	4822 425 50068	S10, 11, 12, 13	4822 156 70033
Voet	4822 462 70576	S14, 15	4822 158 60255
Frontplaat met schaal	4822 426 50107	S16-C19	4822 156 10337
Achterwand	4822 435 30033	S17, 18, 19 - C25	4822 156 50017
Knop afstemming	4822 413 10068	S25	4822 145 20072
Knop golfgebied	4822 413 10069	S26	4822 140 40215
Knop geluidssterkte, klank	4822 413 10071	D1, 2	4822 130 40229
Schakelaar	4822 277 60116	D3	4822 130 30281
Aansluiting 5-polig	4822 267 40039	D4	4822 130 30279
Steker 5-polig	4822 266 30026	LA1, 2, 3	4822 134 40184
Trommel op variabele condensator	4822 528 40155	C20	4822 121 50007
Wijzer	4822 450 80262	C21	4822 121 50003
Afstemeenheden FM	4822 210 10132	C25	4822 121 50047
Schaalachtergrond	4822 466 70165	C26, 30	4822 121 50024
Golfbereikas met arrêteerwiel	4822 535 70308	C27	4822 121 50404
Veer met bevestigingsbeugel voor	4822 310 20199	C28	4822 121 50016
4822 535 70308		C36, 37, 46	4822 121 50028
Luidspreker (4 Ω)	4822 240 50035	C47	4822 121 50053
Veiligheid	4822 253 30012	C63	4822 124 40014
		C64, 65	4822 122 50002
		R25	4822 101 50106
		R29	4822 101 30209

Voor verdere gegevens en trimvoorschriften wordt verwezen naar de volledige servicedocumentatie.

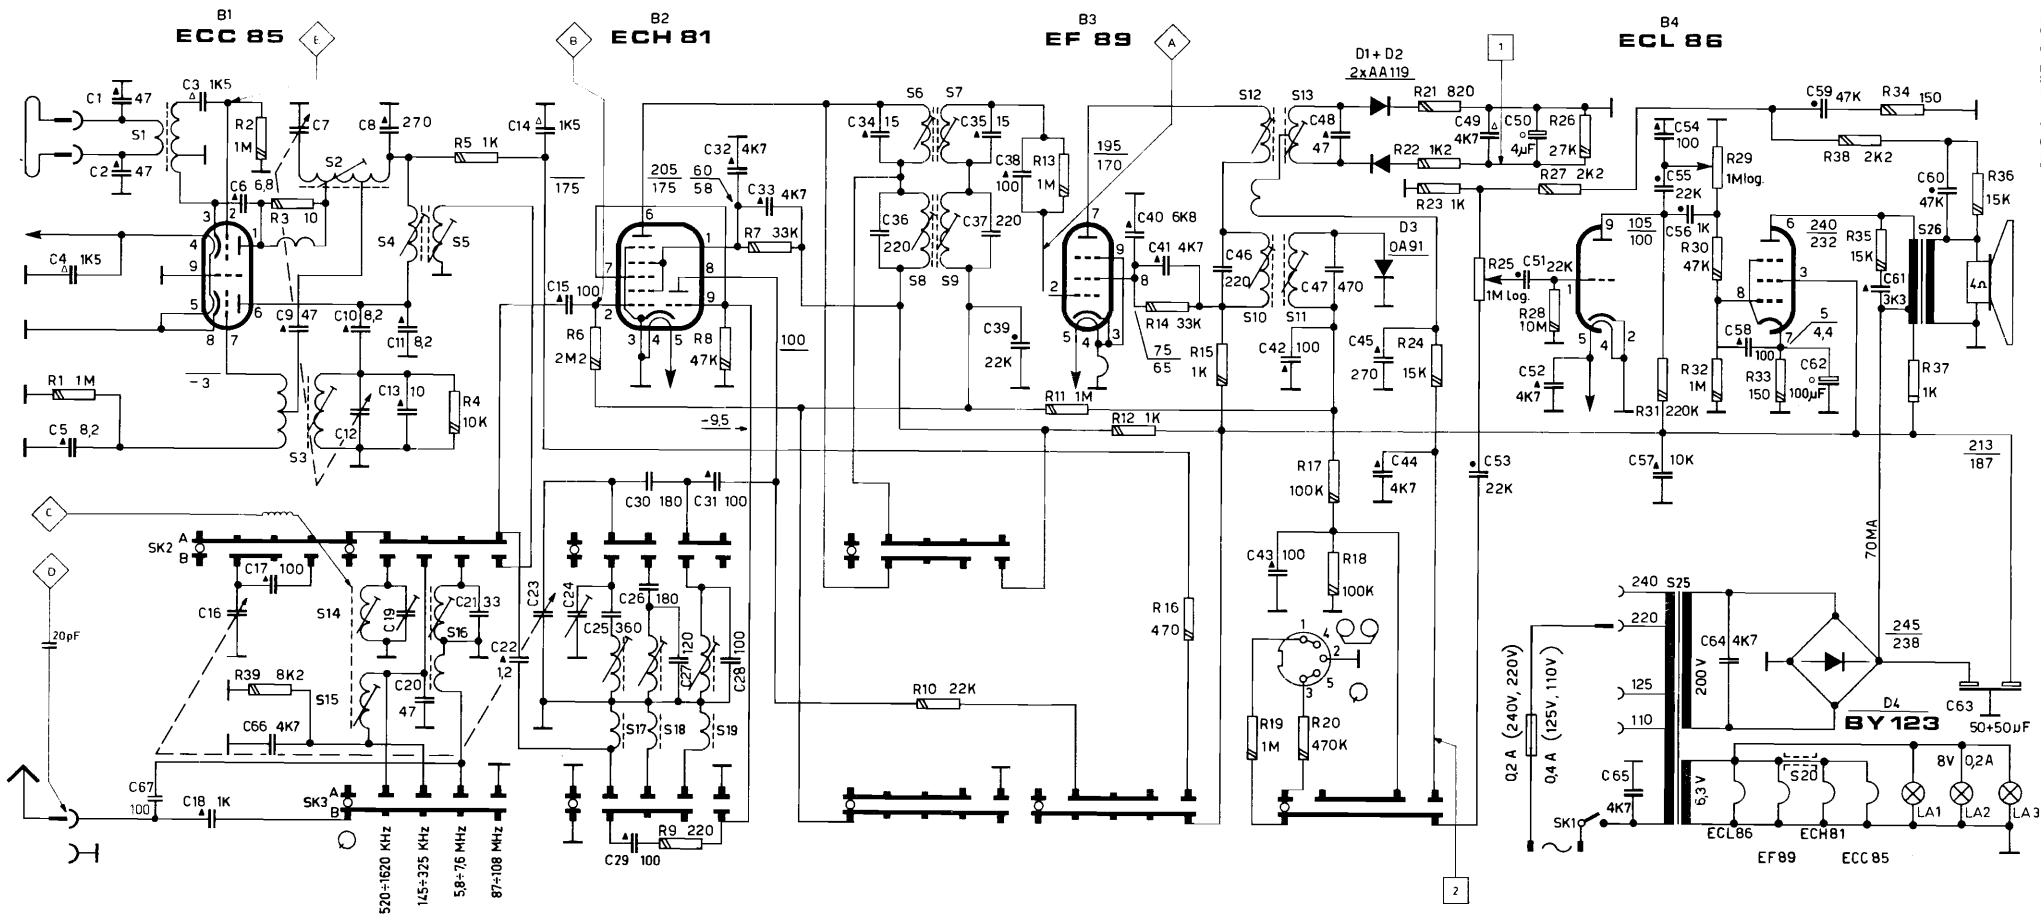

L4-L5-L6-L7-L12-L13	10,7 MHz	VOLT	AM
L8-L9-L10-L11	45,2 MHz	FM	

