
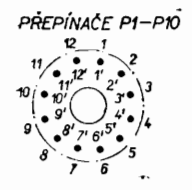


R	83, 93, 71,	72,21, 73, 74,	75, 3, 5, 4,76,77,78,6a,6b,79,	94, 80,81,82, 91, 15,25,84,13,86,17,8,	87, 88, 35, 9,7,89, 10, 90, 14, 92, 11, 12, 20, 18,	29,33,203,202,23,28,37,36,27,31,32,19,38,25,122, 40,26,24,34,39,	123, 107,106,101,110,102,103,108,105,104,109,	112,111,113, 114, 116, 117,115,124, 118, 119,	201,		
C	14, 1,	15,16,	17,4,5,71,8,34,9,33,18,19,20,6,7,27,3,36,71,21,2,25,76,74, 39,75,79,32,2, 12,13,10,11,28,26,80,27,23,4,81,25,30,28,29,83,84,41,85,29,46, 86,42, 30,87, 88,40,89, 31, 39, 32,43,94, 45,	44, 51, 47,	114, 115,	55,52,61,54, 68, 50, 67, 62, 64, 59,60,65, 57,56,58,66,	101,	106,105,102, 104,203, 107,	108, 201, 109, 110,	204, 113, 202,	205,
f	1,M,Z,S, 2',3,71,2,3,	4',5',4,5, 6,7,	8,9,10,11,8',9',10',11',	72,	73,74,12,13,12',	14, 15, 74',	17, 18,	16,	206,203,204,202',202',205,201,	101,101',102,103,104,105,	

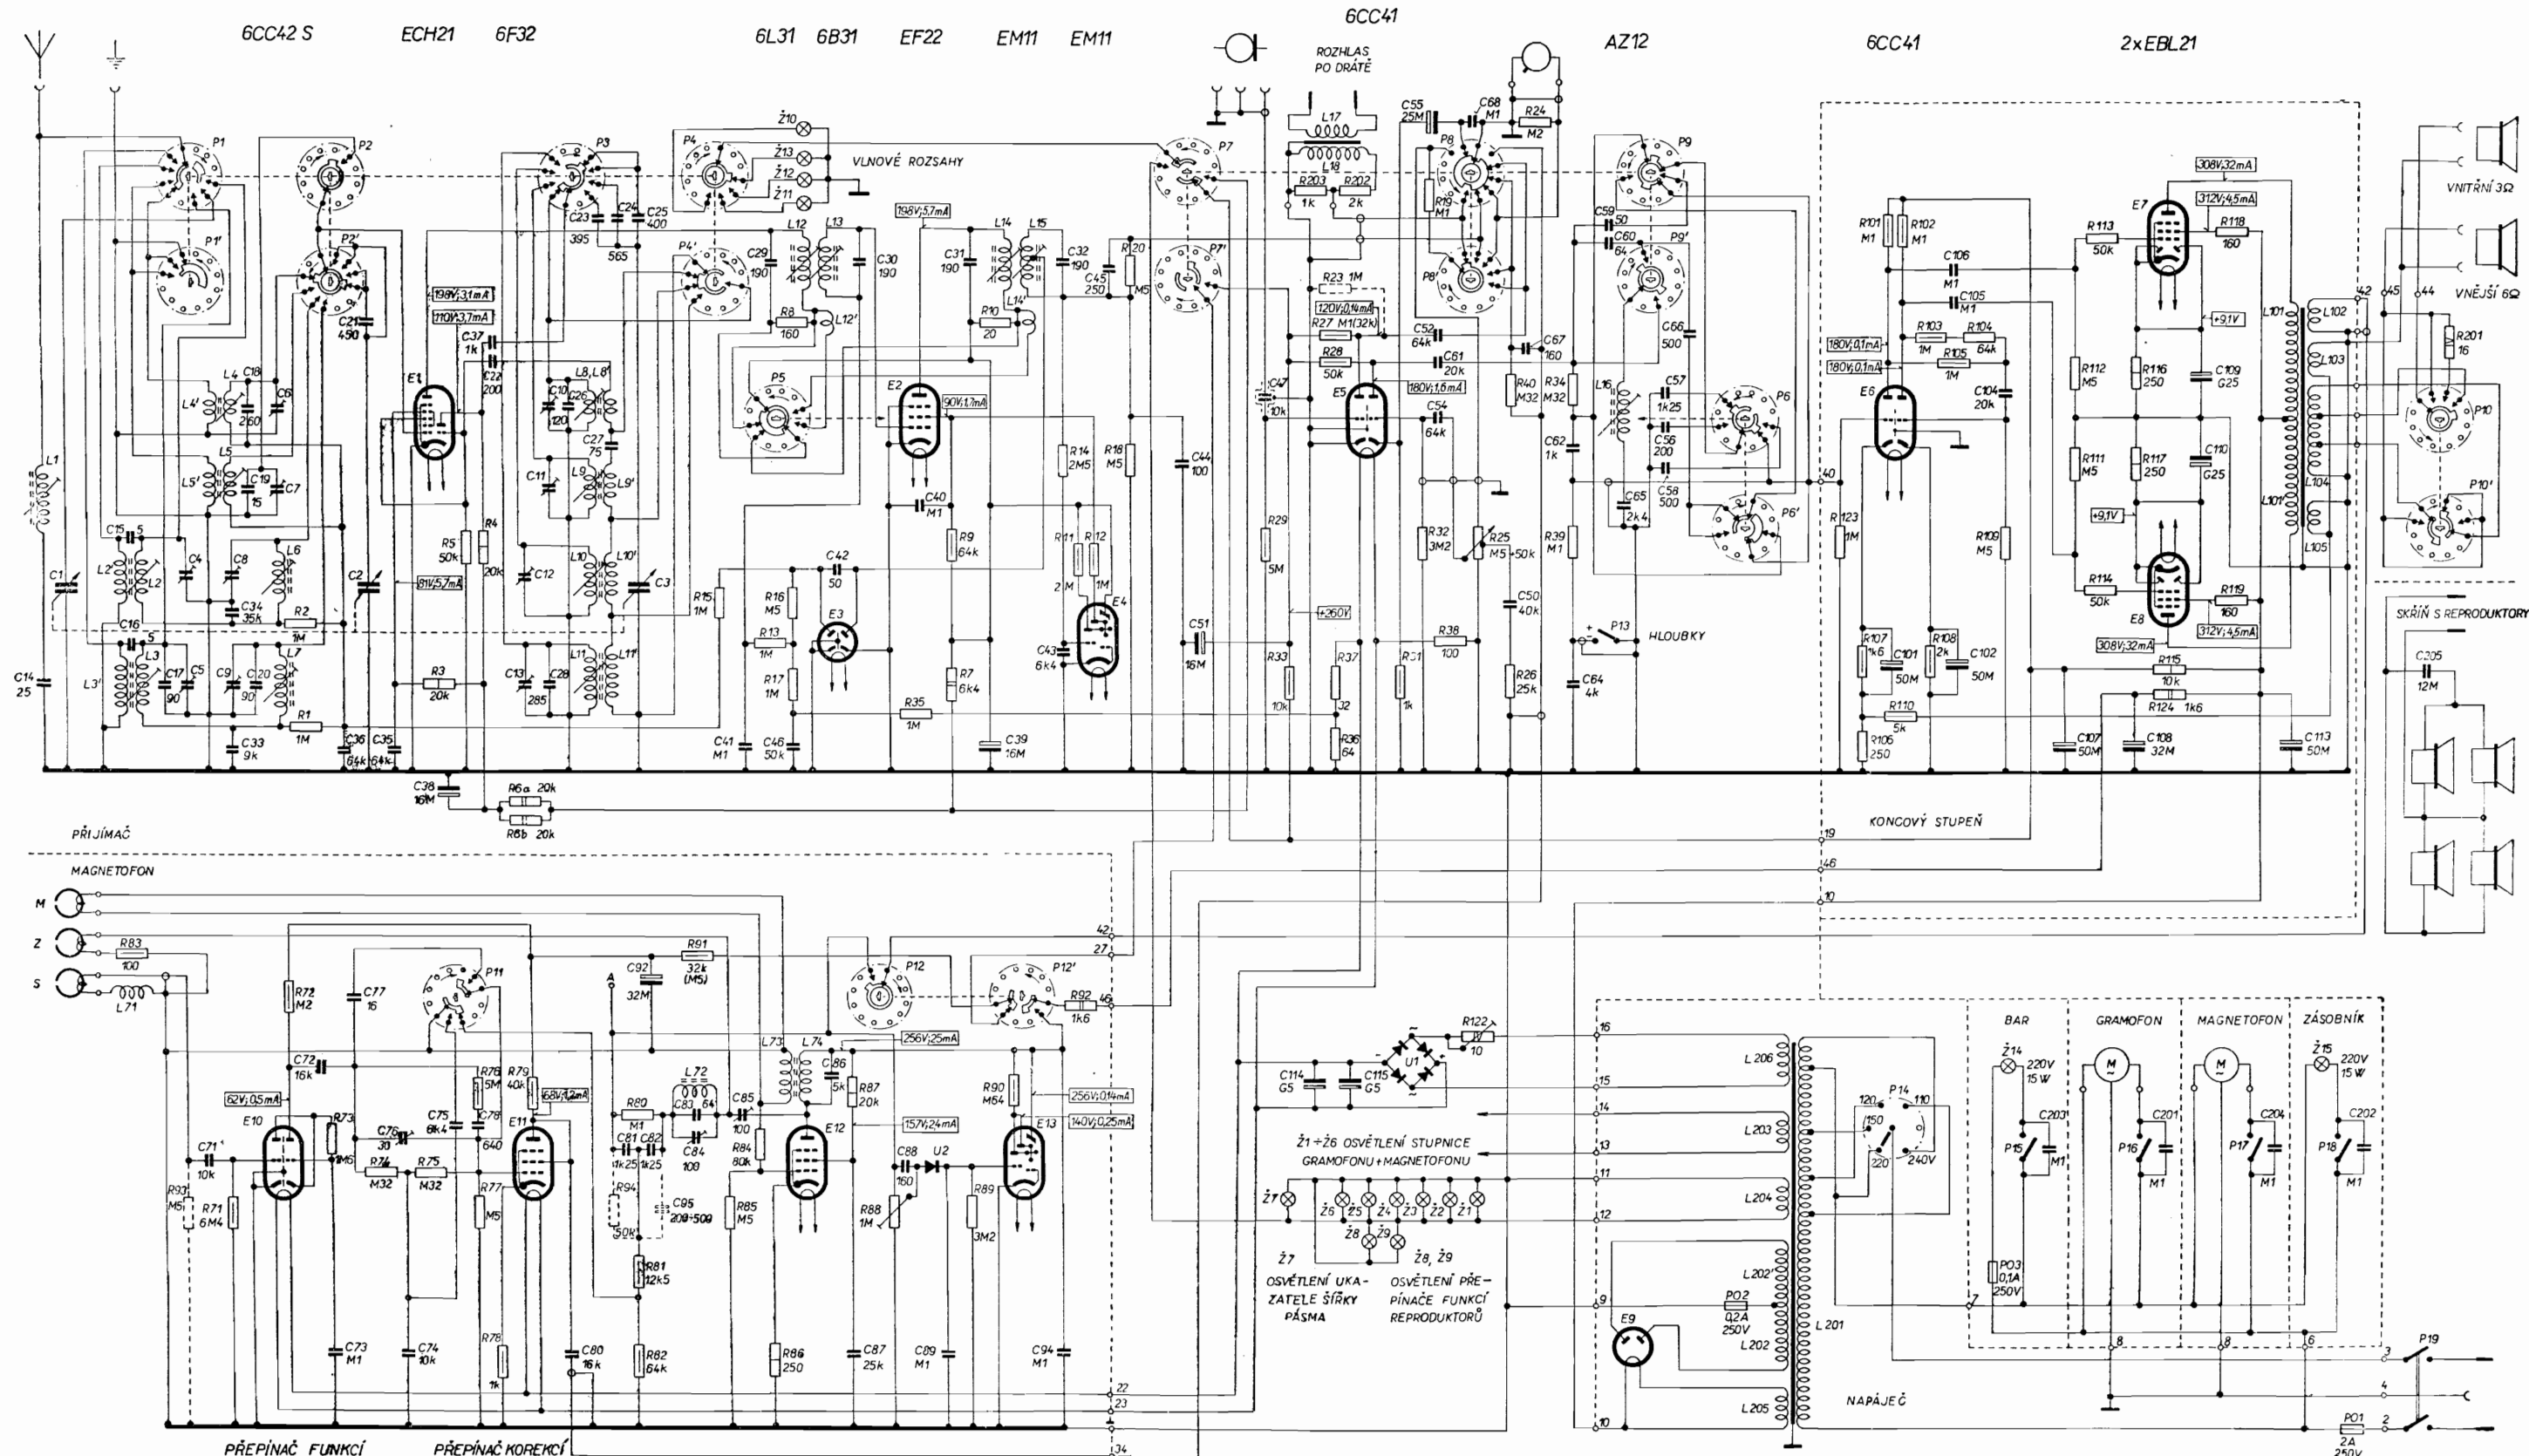

POLOHY	SPOJENÉ DOTEKY P12	POLOHY	DOTEKY P11
REPRODUKCE	8'-9'	6-8,	
ZÁZNAM	1-12, 4'-5'	9,5cm/s	2-3, 7-8,

ROZSAHY	SPOJENÉ DOTEKY P1	SPOJENÉ DOTEKY P2	DOTEKY P3	SPOJENÉ DOTEKY P4
KV1	8-12,		4'-10',12',	2-7-8, 1-4, 9'-10'-11',
KV2	9-12,	11'-12',	2-7, 3'-9'-12',	3-7-9, 1-5, 4'-8-9'-11',
SV	10-12,4-5, 10'-11'-12',		2'-8'-12', 4-7-10,	1-6, 4'-8'-11',
DV	11-12,5-6, 10'-11'-12',		1'-2'-12', 5-7-11,	1-7, 4'-11'

POLOHA	DOTEKY P5	SPOJENÉ DOTEKY P6
HLOUBKY	5-8-9-11,	5-7-11, 4'-6', 11'-1',
ÚZKÉ PÁSMO	5-8-9-11,	4-7, 4'-6', 11'-1',
STŘEDNÍ P.	4-8-9-11,	7-9, 4'-6', 11'-1',
ŠÍROKÉ P.	3-4-5-11,	
VÝŠKY	3-4-5-11,	6'-9'

POLOHA	SPOJENÉ DOTEKY P7	SPOJENÉ DOTEKY P8	SPOJENÉ DOTEKY P9
ROZHLAS PO DRÁTĚ		12-1-3-4-5-6, 11'-12',	12-3-5, 11'-12',
RÁDIO	4-5, 10-11,	1-3-4-5-7, 11'-1',	12-4-5, 6'-8'-12',
GRAMOFON		12-1-3-4-6-7, 11'-2',	12-3-4-5, 11'-12',
MAGNETOF.		4-5, 12-1-3-5-6-7, 11'-3',	12-3-4-5, 11'-12',
MKROFON		12-1-4-5-6-7, 11'-4',	3-4-5-9, 11'-12',

POLOHA	SPOJENÉ DOTEKY P10
VNĚJŠÍ	1-4',
VNITŘNÍ	2-11,
VNĚJŠÍ + VNITŘNÍ	1-11, 3'-4',
VNĚJŠÍ + VNITŘNÍ	12-11, 10'-11',

Zapojení hudební skříně 1101A „JUBILANT“