


|   |   |
|---|---|
| R | 1, 5, 7, 6, 8, 9, 15, 10, 18, 19, 17, 16, 2, 21, 22, 23, 26, 27, 28, 41, 42, 36, 37, 41, 31, 34, 32, 33, 82, 62, 50, 48, 51, 52, 49, 53, 40, 54, 39, 38, 55, 76, 77, 78, 56, 57, 58, 59, 79, 60, 80, 61, 63, 81, 65, 66, 64, 67, 68, 69, 72, 71, 70,  |
| C | 2, 1, 3, 4, 10, 5, 9, 14, 33, 15, 37, 38, 13, 11, 17, 18, 7, 8, 12, 16, 39, 40, 19, 44, 45, 46, 51, 43, 52, 47, 54, 53, 19', 23, 26, 29, 22, 25, 28, 7, 9, 20, 21, 24, 27, 30, 55, 56, 57, 58, 62, 61, 64, 65, 66, 63, 71, 67, 68, 69, 70, 72, 88, 75, 76, 73, 74, 81, 77, 78, 82, 87, 86, 84, 85, 83, 91, 92, 93, 94, 101, 110, 112, 34, 90, 111, 95, 35, 96, 97, 113, 98, 99, 114, 115, 116, 103, 102, 105, 104, 117, |
| L | 2, 1, 4, 13, 14, 14', 3, 3', 6, 7, 7', 5, 8, 13, 13', 17, 19, 19', 20, 9, 10, 10', 11, 12, 21, 23, 26, 27, 22, 24, 25, 28, 30, 29, 31, 31', 32, 34, 33, 35, 35', 36, 38, 37', 37, 39, 37', 39', 46, 47, 43, 43', 44, 45, 45', 42, 40, 41, 41',  |

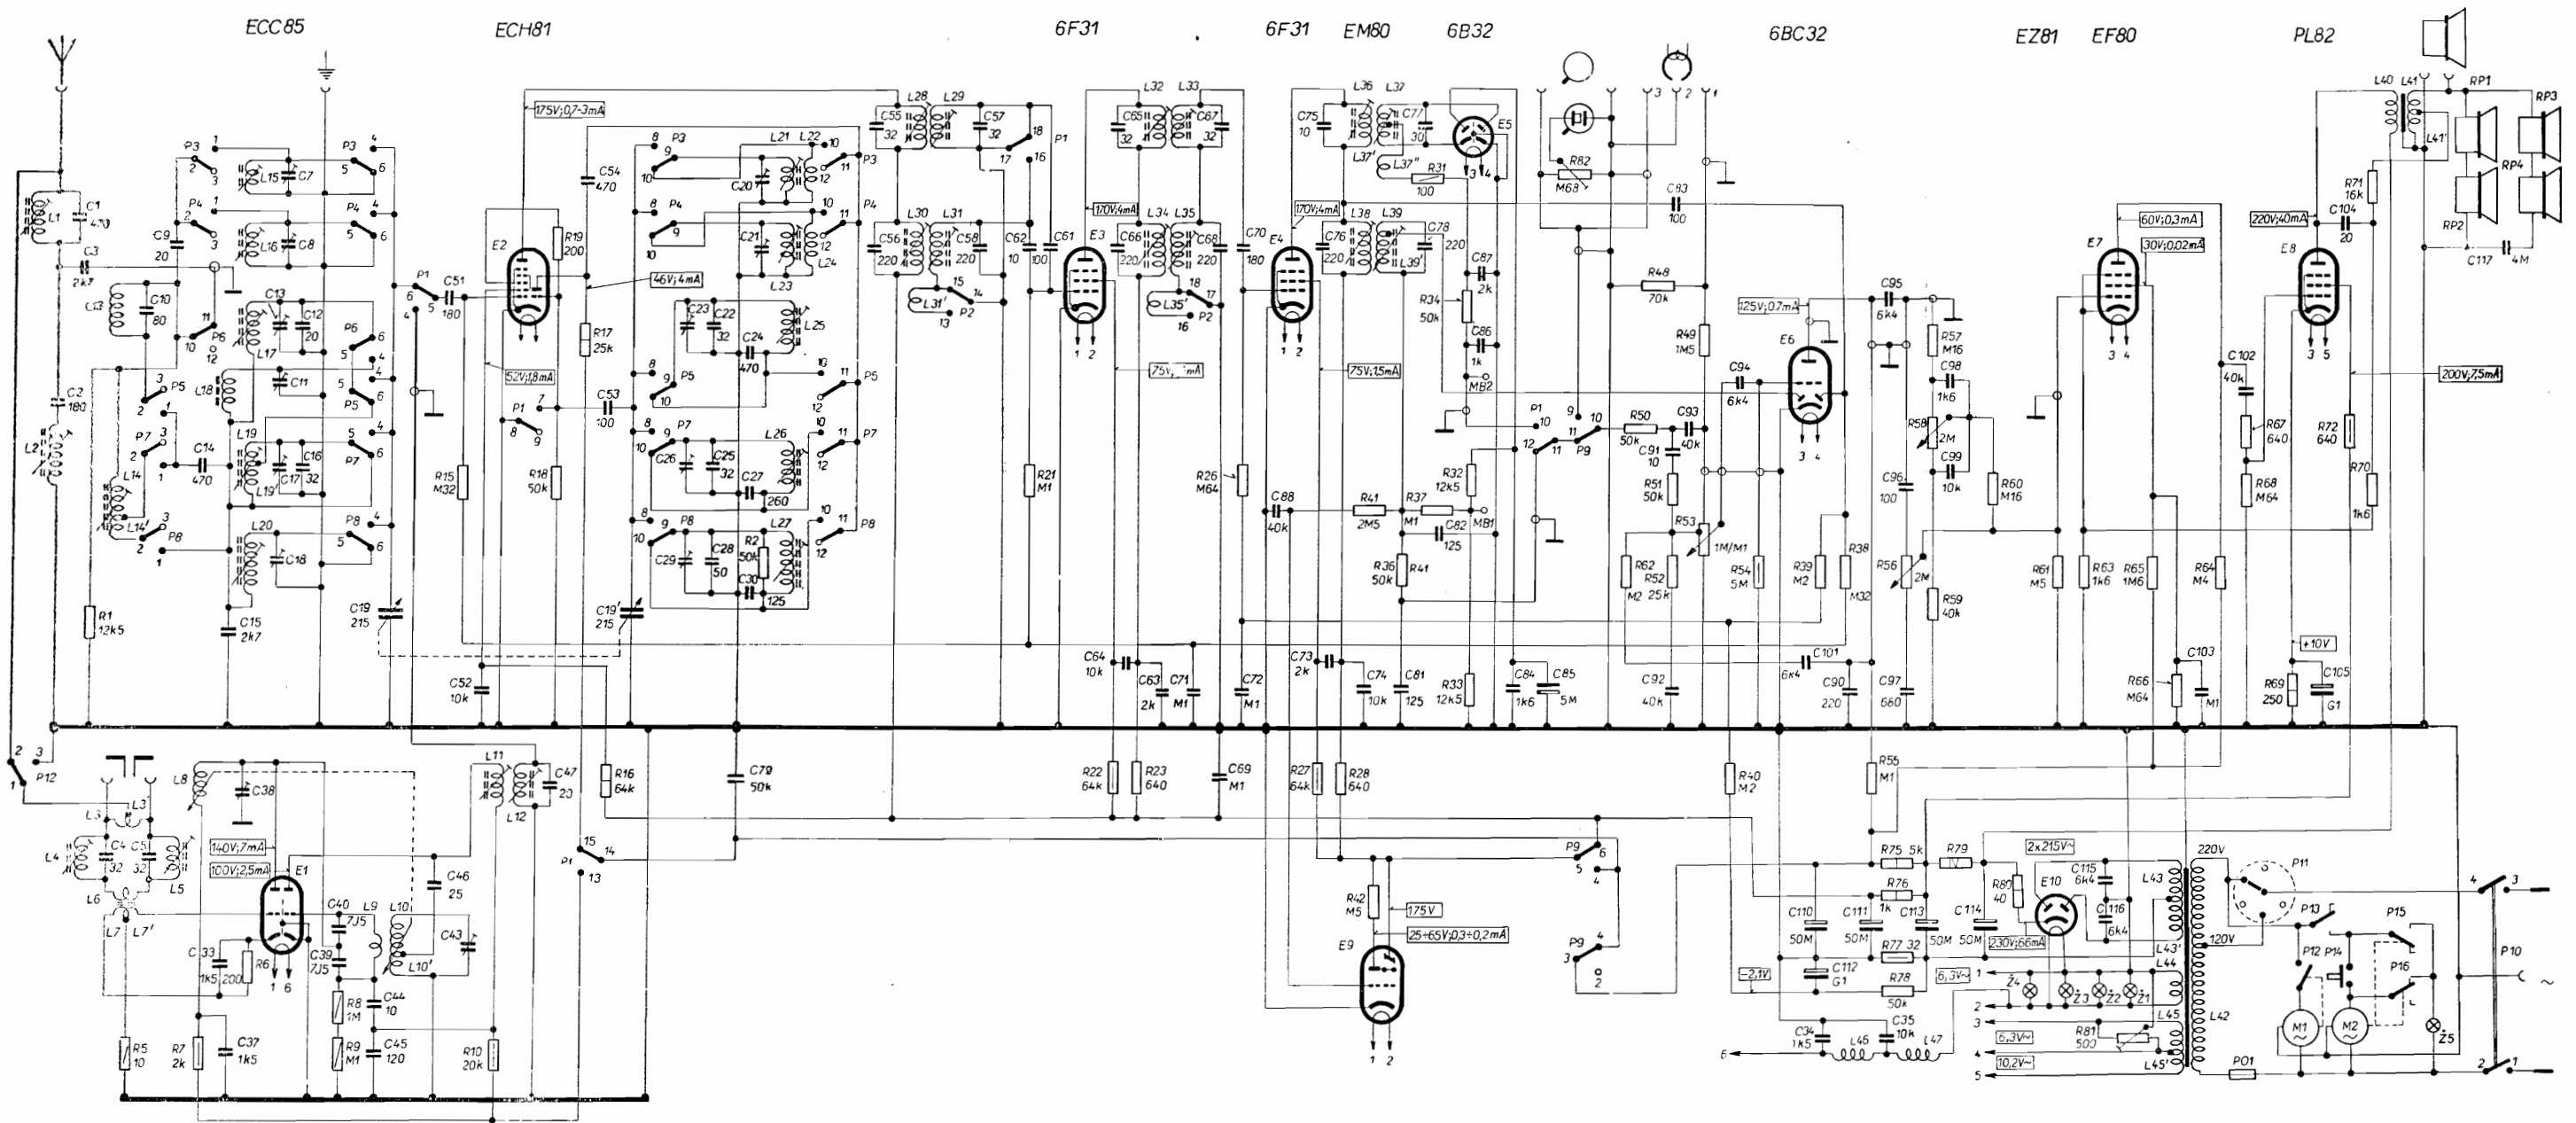

TLAČÍTKOVÝ PŘEPÍNAČ P1-P10

| TLAČÍTKO<br>OZNAČENÍ | STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO: |                                |
|----------------------|--|--------------------------------|
|                      | SPOJÍ SE                                   | ROZPOJÍ SE                     |
| VYP. P10             |  | 1-2, 3-4,                      |
| GRAMO P9             | 3-2, 5-4, 9-10,                            | 3-4, 5-6, 9-10-11,             |
| DV P8                | 1-2, 4-5, 8-9, 10-11,                      | 2-3, 5-6, 9-10, 11-12,         |
| SVI P7               | 1-2, 4-5, 8-9, 10-11,                      | 2-3, 5-6, 9-10, 11-12,         |
| FERRIT P6            | 4-5, 10-12,                                | 5-6, 10-11,                    |
| SVII P5              | 1-2, 4-5, 8-9, 10-11,                      | 2-3, 5-6, 9-10, 11-12,         |
| KVI P4               | 1-2, 4-5, 8-9, 10-11,                      | 2-3, 5-6, 9-10, 11-12,         |
| KVII P3              | 1-2, 4-5, 8-9, 10-11,                      | 2-3, 5-6, 9-10, 11-12,         |
| ČI P2                | 13-14, 15-17,                              | 14-15, 17-18,                  |
| VKV P1               | 4-5, 7-8, 10-11, 13-14, 16-17,             | 5-6, 8-9, 11-12, 14-15, 17-18, |

PŘEPÍNAČE A SPÍNAČE P11-P16

| OZNAČENÍ | ÚČEL                             |
|----------|----------------------------------|
| P11      | VOLIČ NAPĚTÍ                     |
| P12      | SPÍNAČ GRAMOFONOVÉHO MOTORU      |
| P13      | DVEŘNÍ SPÍNAČ VÝKVNÉ ČÁSTI       |
| P14      | TLAČÍTKO K OVLÁDÁNÍ VÝSUV. DVEŘÍ |
| P15      | DVEŘNÍ SPÍNAČ V HORNÍ ÚVRATÍ     |
| P16      | DVEŘNÍ SPÍNAČ V DOLNÍ ÚVRATÍ     |