


R		41, 1,	22,	2,	3,	43,	42, 4,	40,	5,	6,	7,	44,	10,	11,	16, 12, 13,	14, 12, 35,	15,	19, 20,	21, 39, 33,	24,	25, 26, 27, 28,	31, 32, 29, 30, 36,	37,	38,					
C	1,	8,	74,	70, 71, 53,	2, 3, 4,	5, 6, 7,	54, 10, 9, 11,	66, 12, 67, 14,	72, 73,	15, 16, 17, 18, 19, 20, 22,	21, 23,	43, 24,	26,	25,	75, 31, 33, 35, 37, 28, 29, 30, 32, 34, 36, 39, 38, 40,	41, 42,	44,	45, 46,	51, 47, 49, 50,	48, 52,	77,	55,	56,	68,	57,	60, 62, 58, 59, 61,	65, 63, 69,	64,	70,
L	1,		6, 8, 10, 42, 2, 3, 4, 5, 7, 9, 44, 43, 43, 45,			15, 17, 19, 11,	12, 13, 14, 16, 18,				21, 23, 25, 27, 29, 31, 23, 22, 24, 26, 28, 30,	32, 33,			34, 35,						37, 36,					38, 39, 40, 41,			

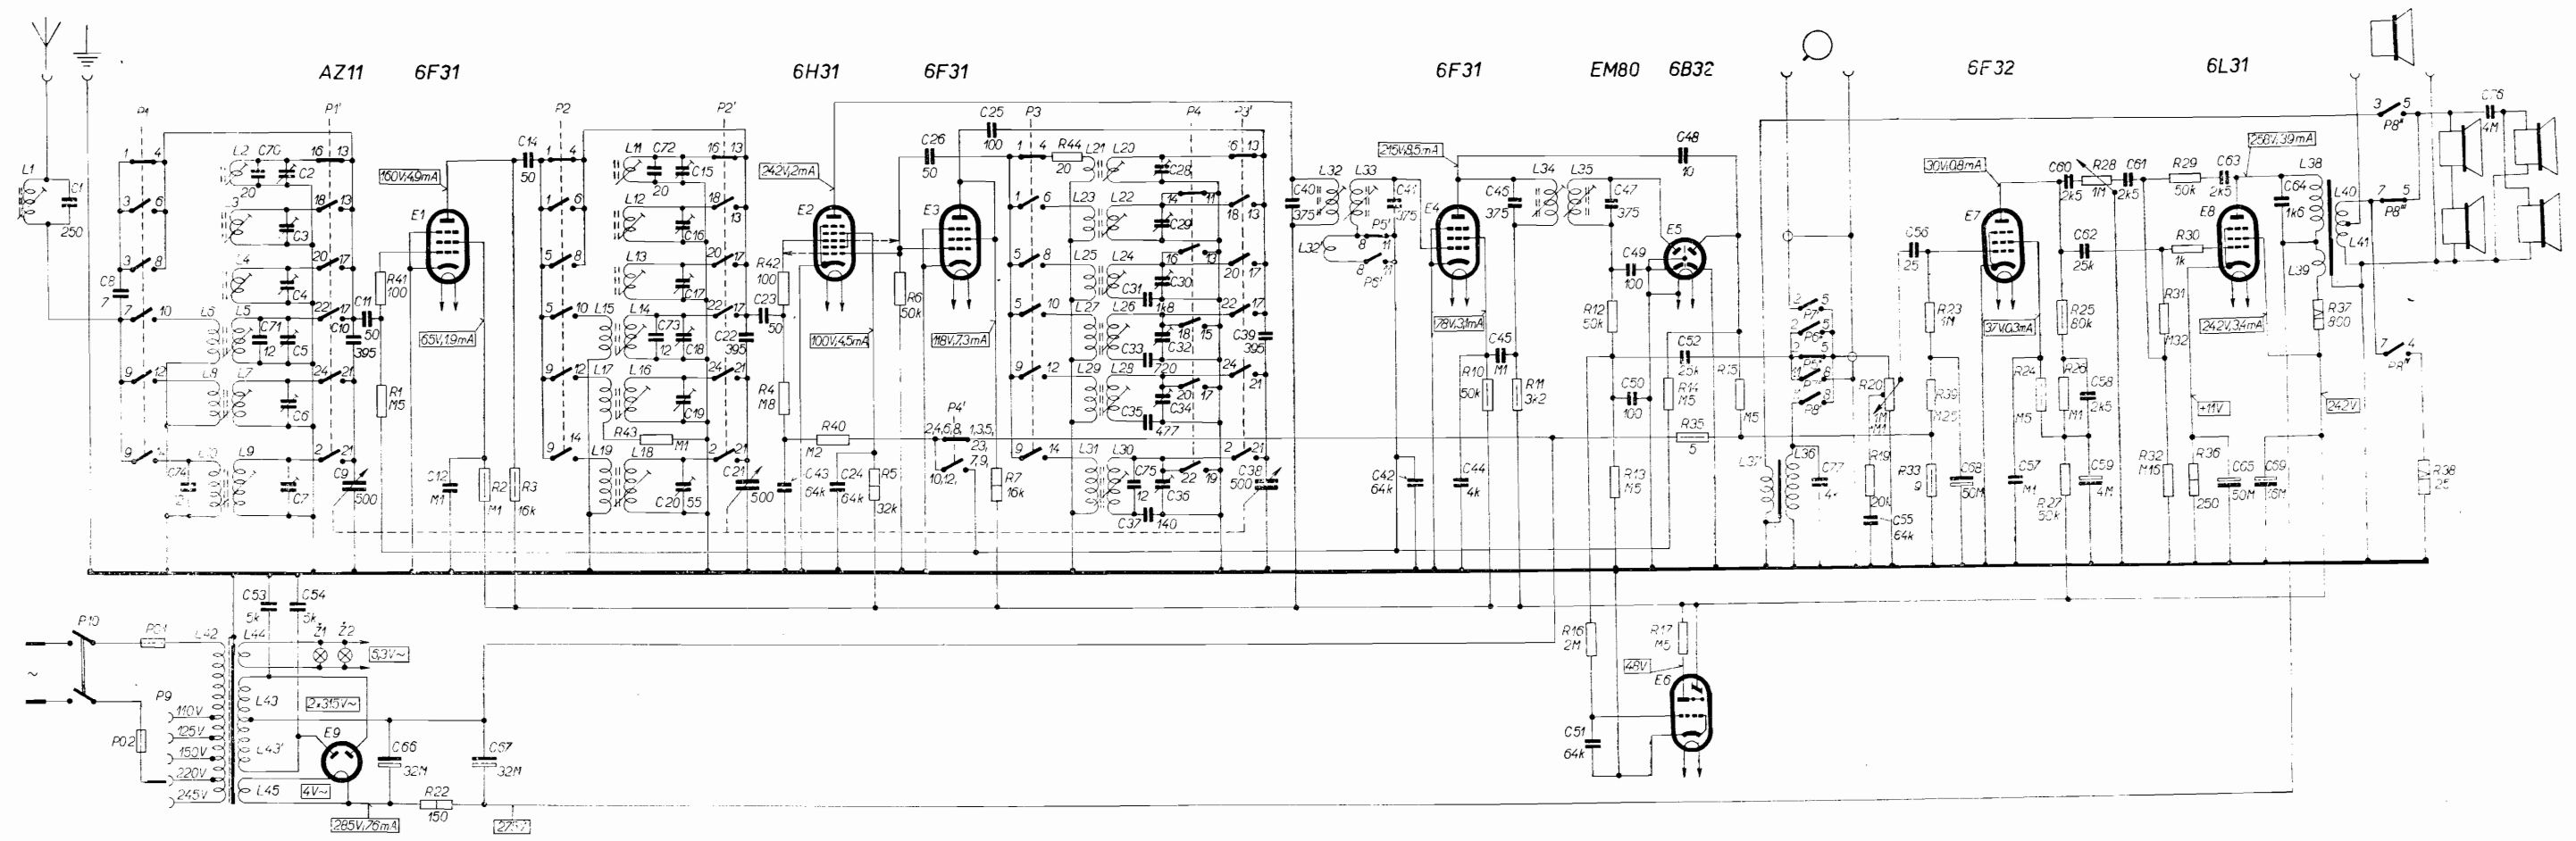

PŘEPÍNAČ VLNOVÝCH ROZSAHŮ P1-P4

ROZSAH	P1	P1'	P2	P2'	P3	P3'	P4	P4'
KV1	1-4,	13-16,	1-4,	13-16,	1-4,	13-16,	11-14,	2, 4, 6, 8 -
KV2	3-6,	13-16,	1-6,	13-18,	1-6,	13-18,	13-16,	
KV3	3-6,	17-20,	5-8,	17-20,	5-8,	17-20,	15-18,	-1, 3, 5, 23,
KV4	7-10,	17-22,	5-10,	17-22,	5-10,	17-22,	17-20,	
SV	9-12,	21-24,	9-12,	21-24,	9-12,	21-24,	19-22,	7, 9-10, 12
DV	9-14,	2-21,	9-14,	2-21,	9-14,	2-21,		

PŘEPÍNAČ PROVOZU P5-P8

TLAČÍTKO	P5'	P5''	P6'	P6''	P7'	P7''	P8'	P8''	P8'''	P8''''
ÚZKÉ PÁSMO	8-11,	2-5,							5-7,	
ŠIROKÉ PÁSMO			8-11,	2-5,					5-7,	
GRAMOFON					2-5,	8-11,			5-7,	
UNIFON							11-8,	3-5,		4-7,