


R	1, 221, 223, 222, 224, 225, 9, 11, 13, 226, 12, 14, 2, 16, 15, 17, 18, 19, 20, 21, 26, 22, 23, 77, 24, 27, 36, 31, 28, 32, 35, 29, 25, 33, 34, 37, 39, 41, 81, 38, 42, 43, 47, 45, 78, 54, 55, 48, 46, 52, 51, 79, 53, 44, 49, 56, 82, 58, 64, 62, 61, 63, 59, 57, 65, 66, 67, 68, 73, 69, 72, 74, 83, 71, 75, 76,
C	2, 3, 1, 4, 5, 7, 8, 13, 14, 221, 223, 222, 33, 12, 16, 6, 9, 17, 32, 11, 15, 19, 226, 227, 231, 232, 52, 54, 230, 229, 56, 55, 18, 214, 23, 26, 29, 22, 25, 28, 19, 21, 24, 27, 31, 51, 53, 75, 57, 61, 59, 58, 62, 64, 65, 63, 68, 71, 67, 69, 78, 66, 73, 83, 120, 74, 80, 81, 77, 76, 79, 82, 85, 84, 86, 87, 91, 92, 88, 89, 118, 93, 94, 95, 115, 96, 97, 116, 99, 101, 98, 102, 103, 117, 104, 225, 106, 105, 36, 108, 119, 107, 109, 111, 112, 113, 114, 110,
L	1, 2, 19, 212, 18, 8, 9, 9, 211, 212, 18, 20, 3, 4, 10, 203, 3, 4, 5, 6, 6, 7, 209, 205, 205, 206, 207, 11, 13, 15, 16, 17, 11, 13, 31, 33, 34, 32, 34, 35, 37, 38, 36, 38, 41, 43, 42, 42, 44, 44, 42,

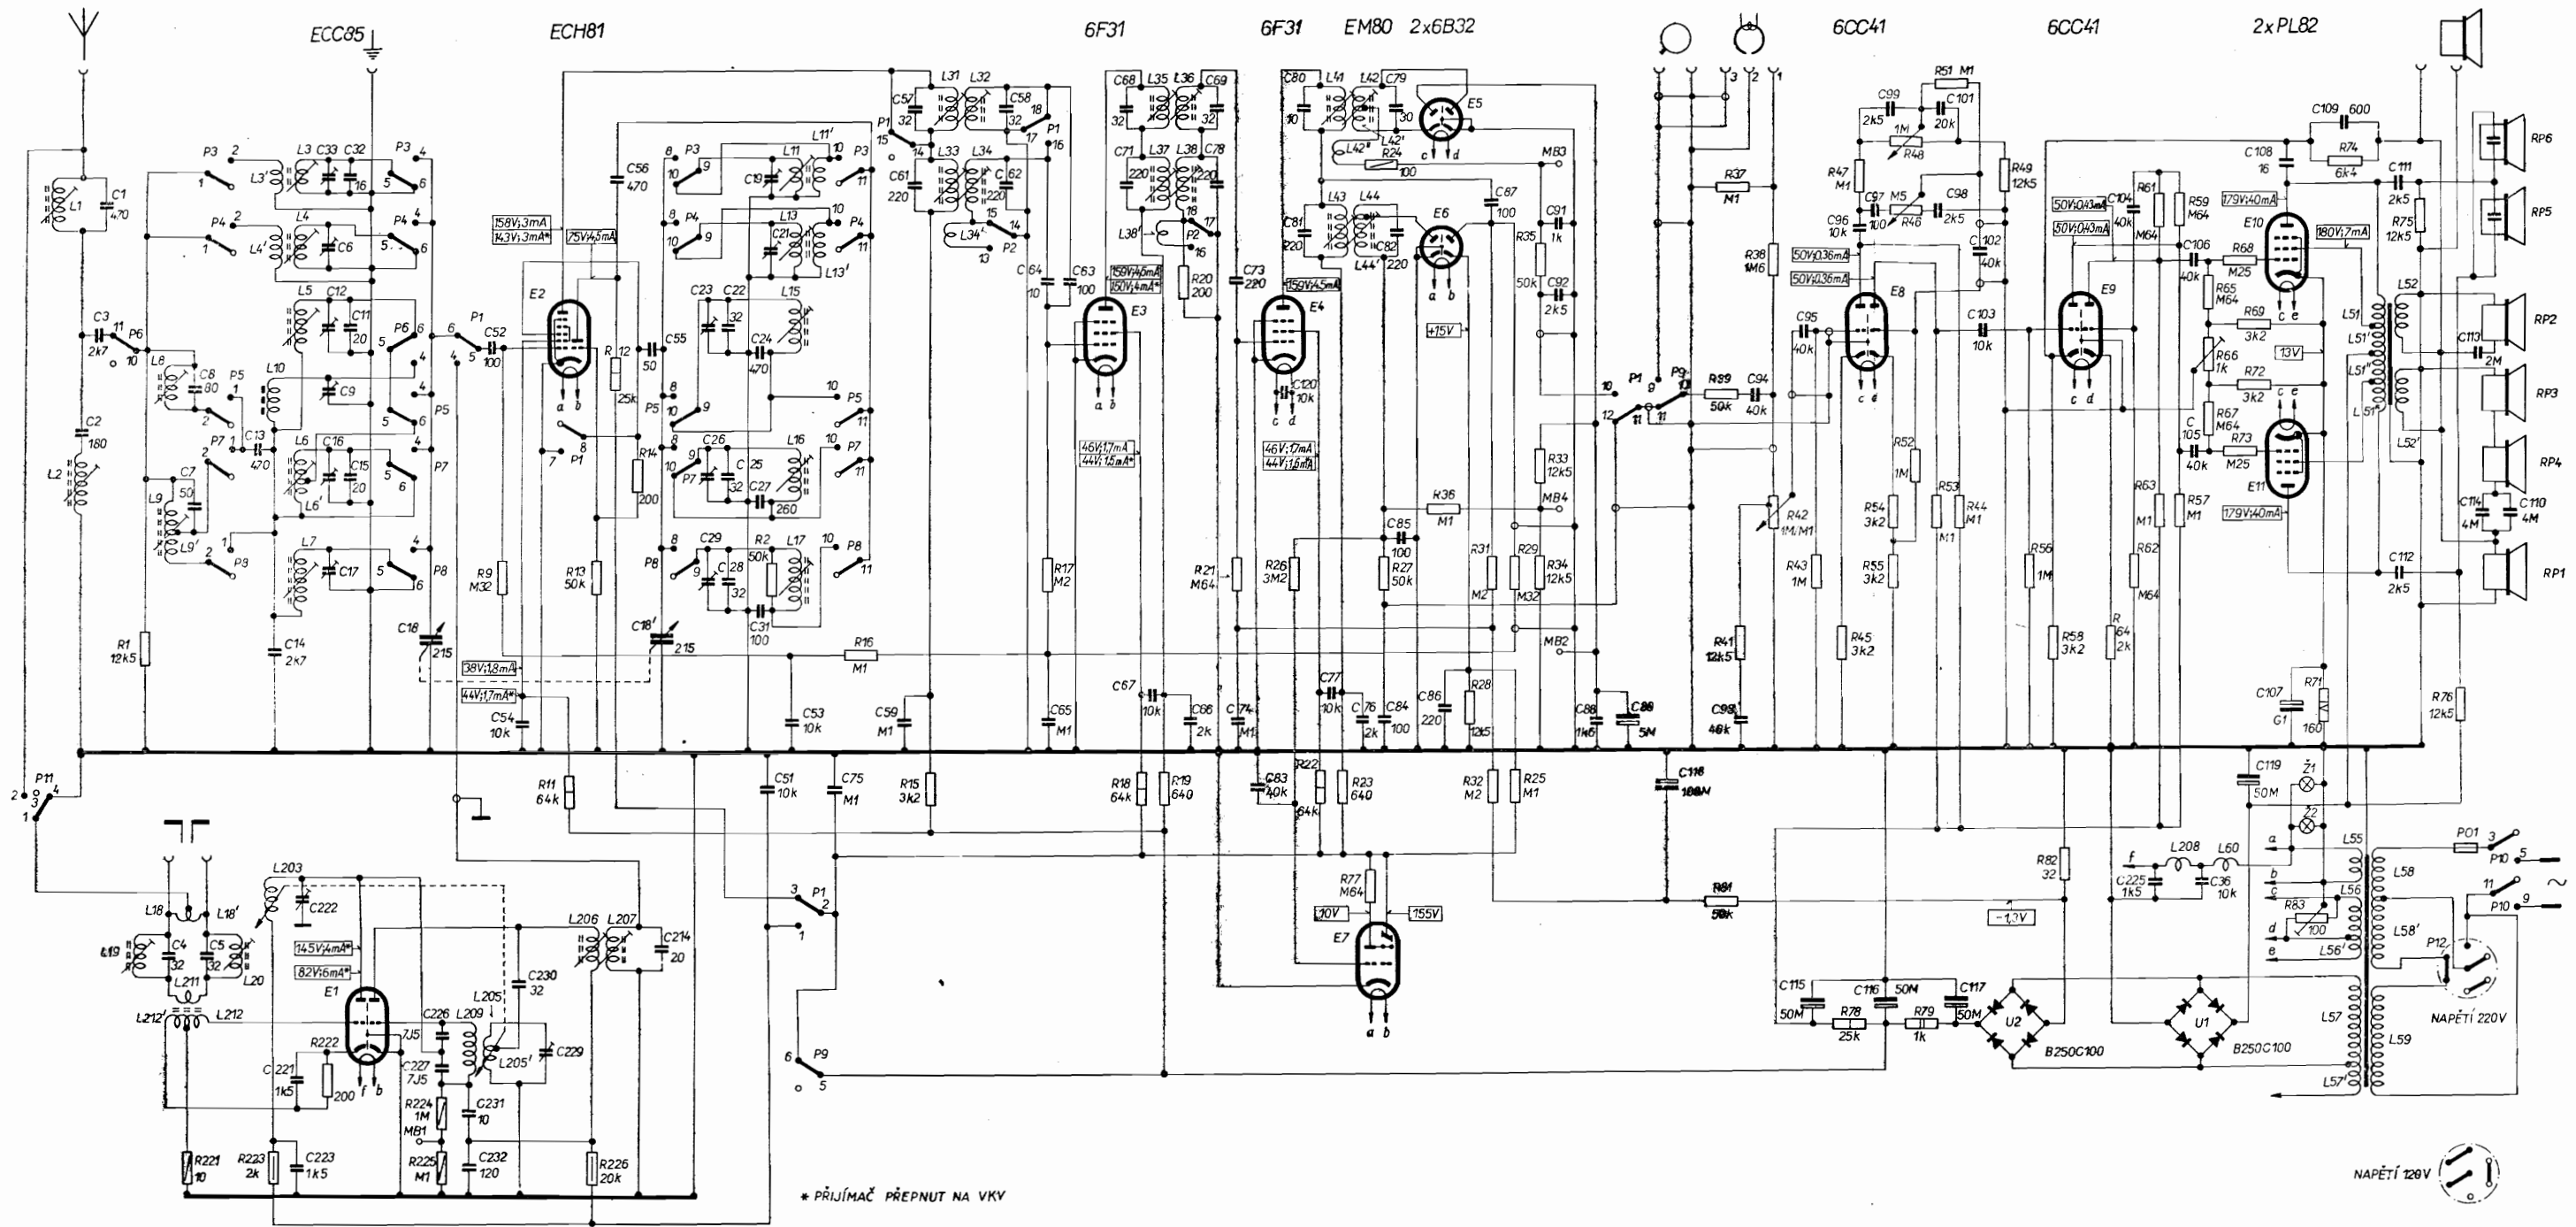

TLAČÍTKOVÝ PŘEPÍNAČ P1—P10

TLAČÍTKO, OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO :	
	SPOJÍ SE	ROZPOJÍ SE
VYP P10	9 - 10	3 - 5, 9 - 11,
GRANO P9	9 - 10	5 - 6, 10 - 11,
DV P8	1 - 2, 4 - 5, 8 - 9, 10 - 11,	5 - 6,
SV II P7	1 - 2, 4 - 5, 8 - 9, 10 - 11,	5 - 6, 9 - 10,
FERRIT P6	4 - 5,	5 - 6, 10 - 11,
SV I P5	1 - 2, 4 - 5, 8 - 9, 10 - 11,	5 - 6, 9 - 10,
KV II P4	1 - 2, 4 - 5, 8 - 9, 10 - 11,	5 - 6, 9 - 10,
KV I P3	1 - 2, 4 - 5, 8 - 9, 10 - 11,	5 - 6, 9 - 10,
ŠÍŘE PÁSM A P2	13 - 14, 16 - 17,	14 - 15, 17 - 18,
VKV P1	1 - 2, 4 - 5, 7 - 8, 10 - 11, 16 - 17,	2 - 3, 5 - 6, 11 - 12, 14 - 15, 17 - 18,

Zapojení přijímače 805A „FILHARMONIE“