




servicegegevens

22 RL 390

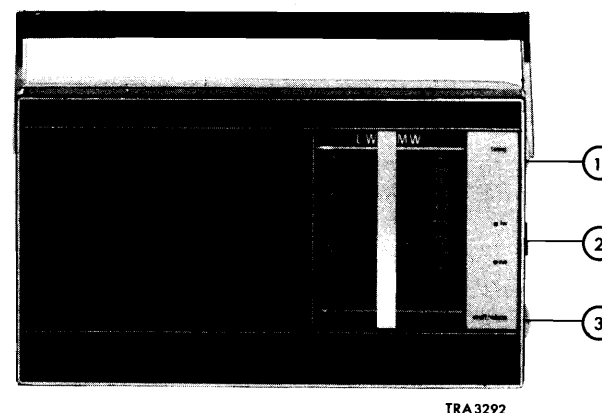


BEDIENINGSORGANEN

- 1 Middengolf/Langegolf (SK-1)
- 2 Afstemming (C421)
- 3 Geluidssterkte aan/uit (R466+SK-3)


CODENUMMERS

Kast achterzijde (00B) crème	4822 421 40025	S411a, b, c, d,	4822 158 60242
Kast achterzijde (00F) groen	4822 421 40026	S412a, b, c	4822 156 30269
Kast voorzijde (00B) bruin	4822 420 40168	S413a, b	4822 156 30268
Kast voorzijde (00F) crème	4822 420 40169	S414a, b, c, d	4822 153 10208
Handgreep	4822 498 60203	K407	4822 242 70113
Veer voor bevestiging handgreep	4822 492 61337	S417 (15 Ω)	4822 240 40061
Deksel van batterijhouder (00B) crème	4822 423 40239	C421a, b, c, d	4822 125 20138
Deksel van batterijhouder (00F) groen	4822 423 40241	C422	4822 122 10044
Batterij contactveer "-"	4822 492 50429	C427	4822 121 50119
Batterij contactveer "+"	4822 492 61343	C430	4822 121 50186
Batterij contactplaat	4822 492 61027	C431	4822 120 10054
Knop geluidssterkte	4822 413 50671	R466	4822 101 50094
Knop afstemming	4822 413 50672	TS403a, b, c, d	40809
Klemveer knop geluidssterkte	4822 492 60901		
Schuifschakelaar	4822 277 20134		
Schuif	4822 278 20075		
Schakelaarmechanisme golfgebied	4822 691 10069		
Trommel op variabele condensator	4822 528 40152		
Wijzer	4822 450 80238		
Aandrijfsnaar	4822 321 30101		
Schaal	4822 333 30017		


S	414		413		412										S							
C	436	434	422	423	433	432	426	431	427	430	445	437	421	439	441	440	446	443	442	C		
R	456	454	450	451	453	452	452	467	467	467	467	467	467	467	478	478	473	474	476	477	R	
R	459	458	457	463	463	462	455	465	461	460	468	468	468	468	468	468	468	468	468	468	468	R

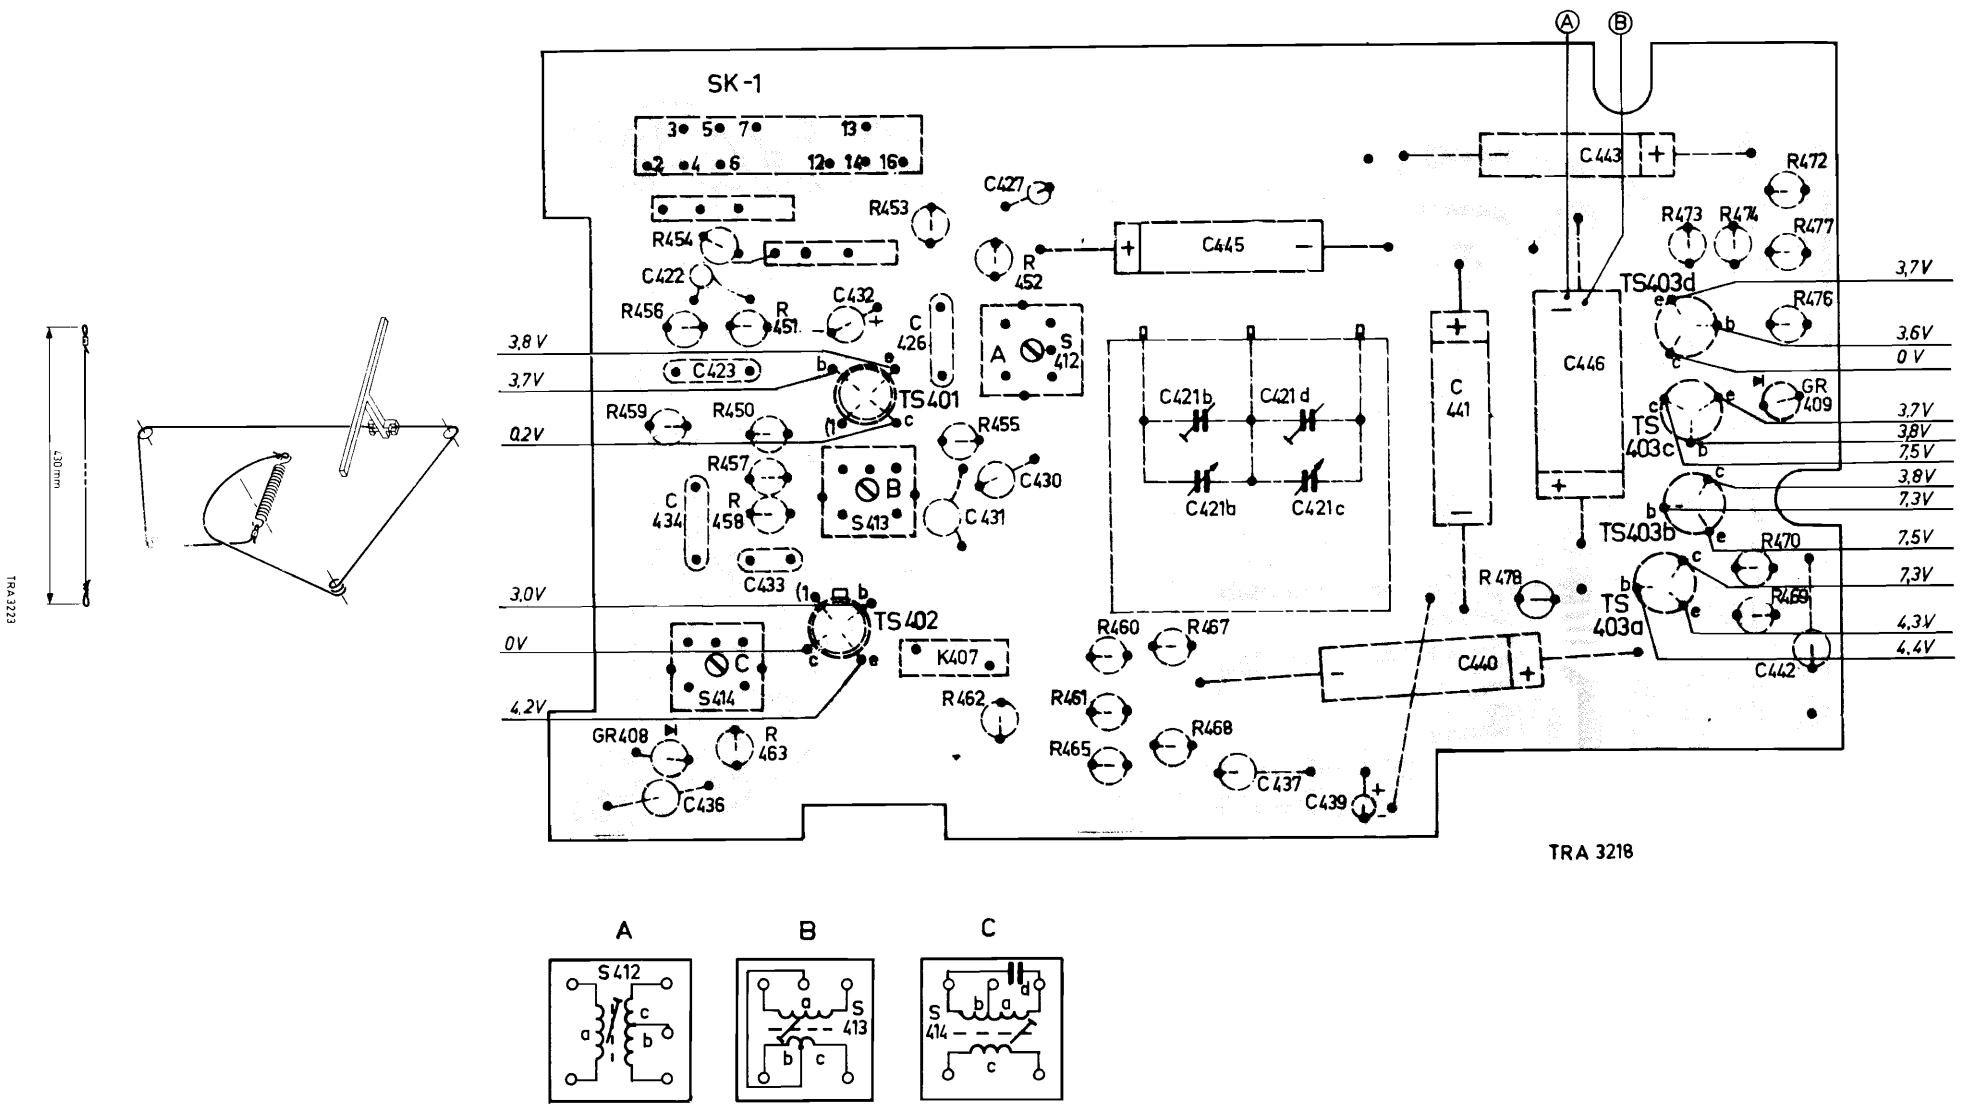

TRA 3218

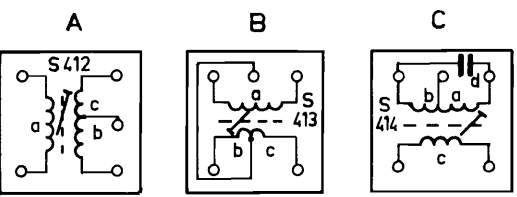

S	411		412, 413		414										S									
C	421a	422	421b	423	430	426	421d	427	431	421c	433	434	432	436	439	437	440	441	442	445	446	443	C	
R	454	451	450	456	452	455	453	458	460	457	459	462	461	463	465	466	467	468	470	469	476	474	478	R

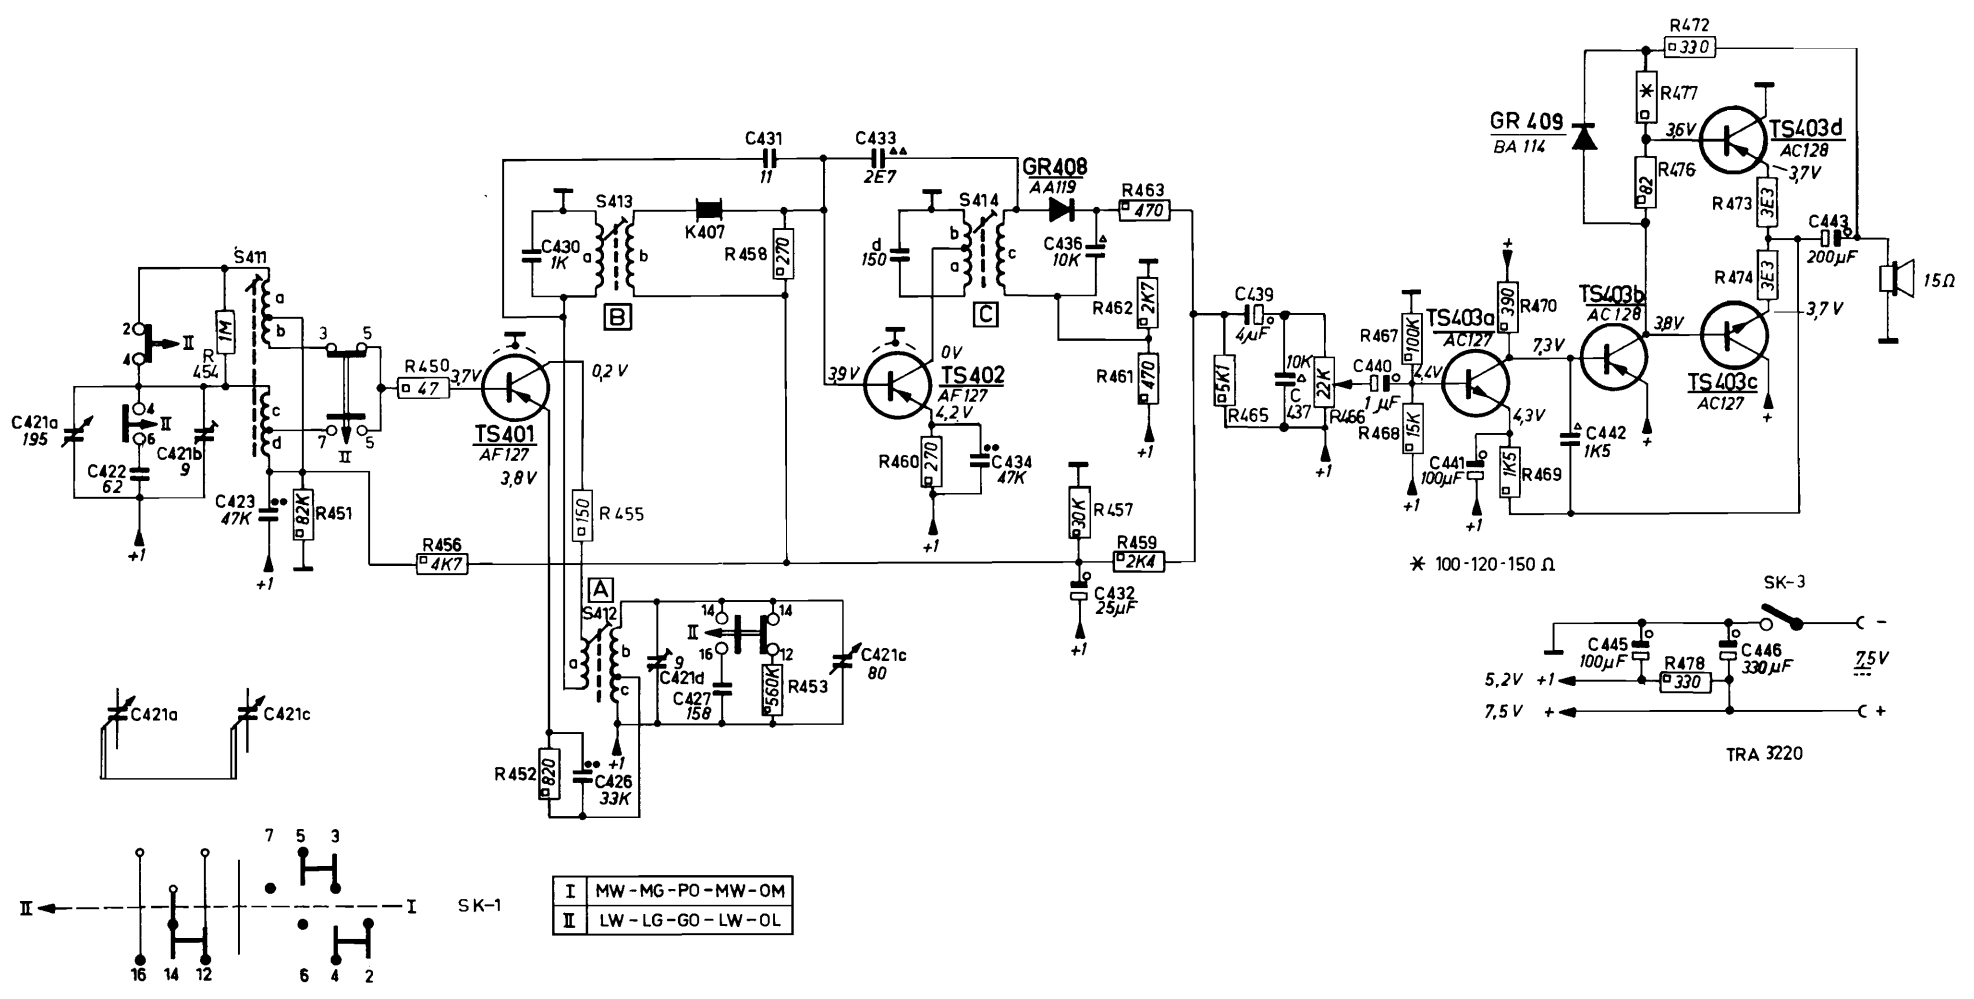

TRA 3220