


R	41, 1										3	43, 22		42, 4		40	5	6	7	44, 45		33		10, 11		16, 12, 13		17	19, 20		23	24	25, 26, 27, 28		31, 32, 29, 30, 36		37	38						
C	1	8	74	70, 71, 2, 3, 4, 5, 6, 7, 10, 9, 11				53, 54		4	66, 72, 73, 15, 17, 18, 19, 20, 67, 22, 24, 23, 43				24		26		25	78, 75, 31, 33, 35, 37, 28, 29, 30, 32, 34, 36, 39, 38, 40				42, 41		44	45, 46		47, 49, 50		52	77		55	56		57	60, 62, 58, 59, 61		65, 63, 69		64	72	
L	1	6, 8, 10, 2, 3, 4, 5, 7, 9				42		44, 43, 43', 45		15, 17, 19, 11, 12, 43, 15, 18				21, 23, 25, 27, 29, 31				21, 22, 24, 26, 28, 30				32, 32', 33		34		35		37		36		38, 39, 40, 41												

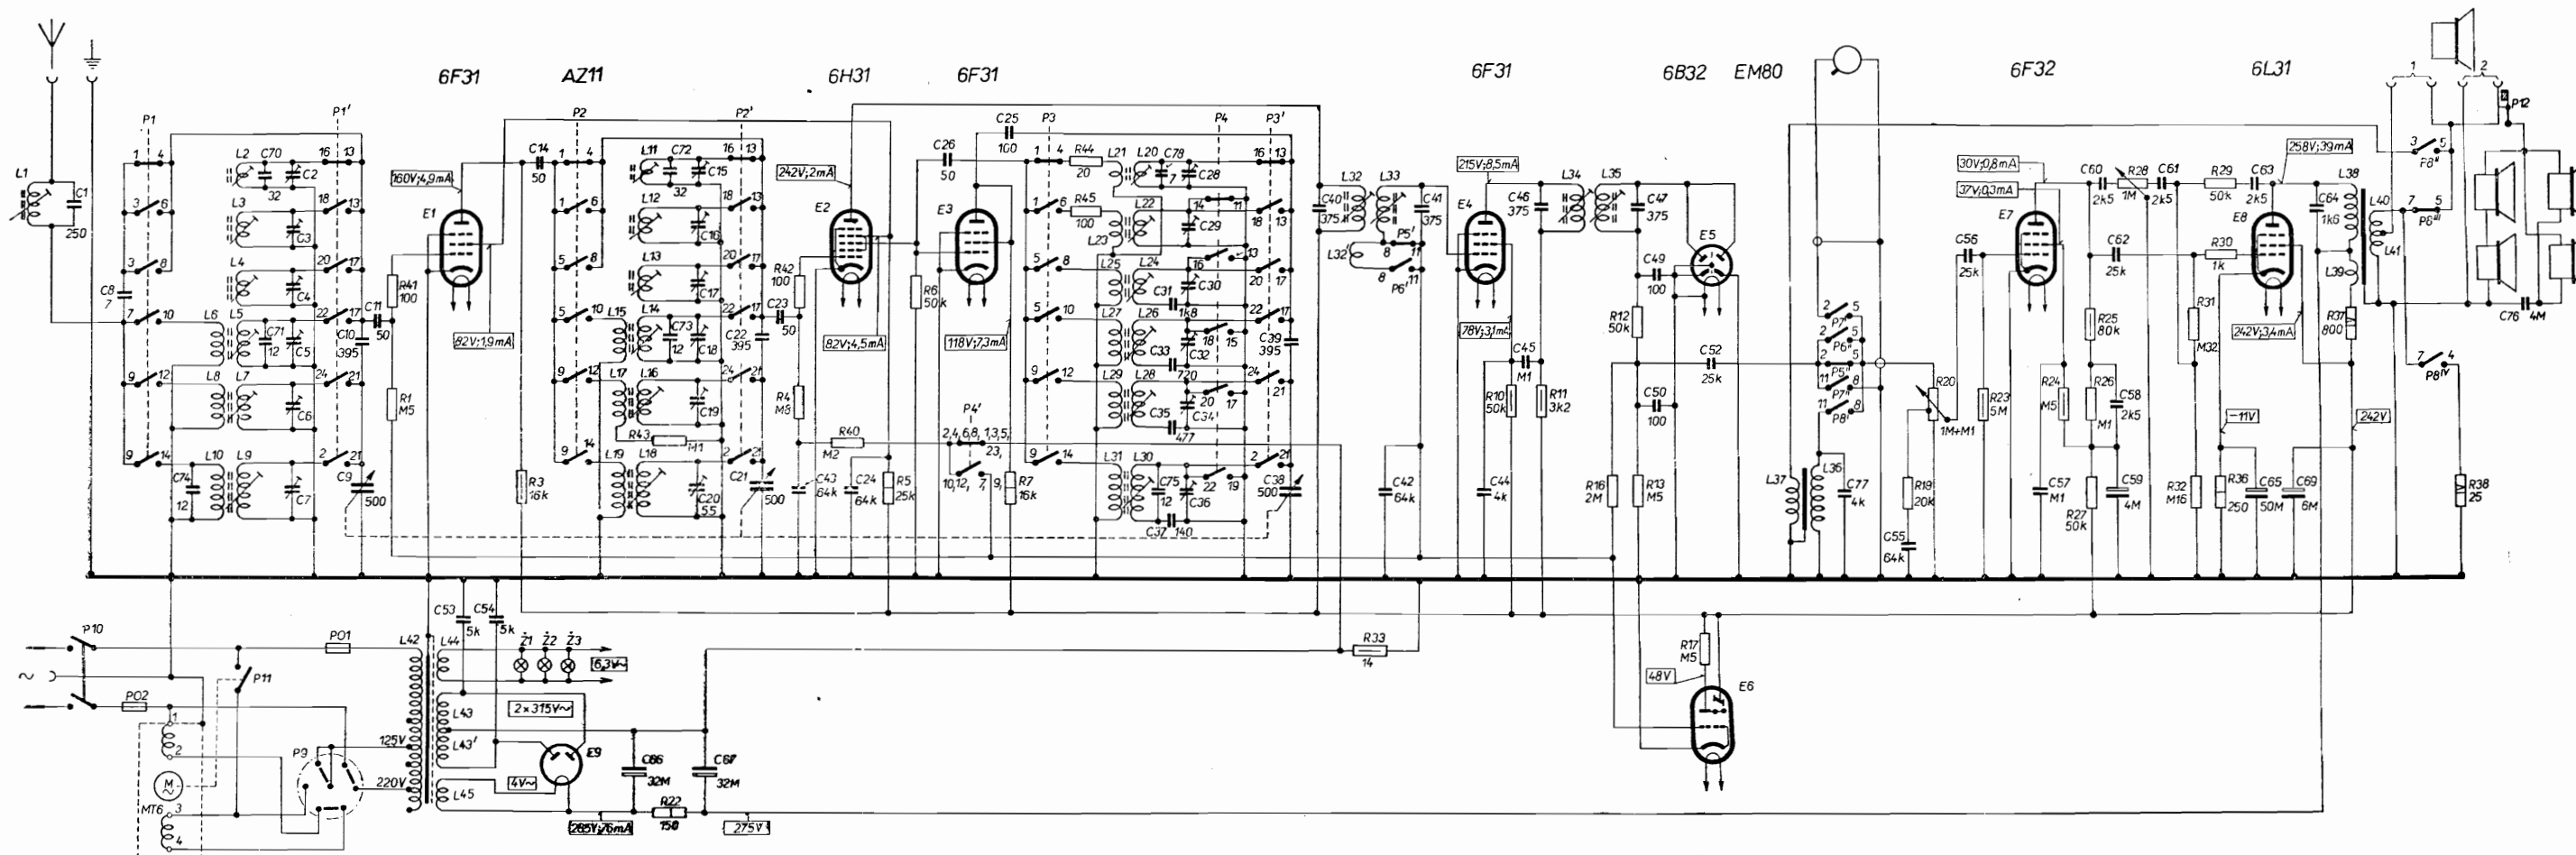

PŘEPÍNAČ VLNOVÝCH ROZSAHŮ P1—P4

ROZSAH	P1	P1'	P2	P2'	P3	P3'	P4	P4'
KV1	1-4	13-16	1-4	13-16	1-4	13-16	11-14	2, 4, 6, 8
KV2	3-6	13-16	1-6	13-16	1-6	13-16	13-16	
KV3	3-8	17-20	5-8	17-20	5-8	17-20	15-18	
KV4	7-10	17-22	5-10	17-22	5-10	17-22	17-20	
SV	9-12	21-24	9-12	21-24	9-12	21-24	19-22	
DV	9-14	2-21	9-14	2-21	9-14	2-21		7, 9-10, 12

PŘEPÍNAČ PROVOZU P5—P8

TLAČÍTKO	P5'	P5''	P6'	P6''	P7'	P7''	P8'	P8''	P8'''	P8'''
ÚZKÉ PÁSMO	8-11	2-5							5-7	
ŠIROKÉ PÁSMO			8-11	2-5					5-7	
GRAMOFON					2-5	8-11			5-7	
UNIFON						11-8	3-5		4-7	

PŘEPÍNAČ NAPĚTÍ P9

