


servicegegevens

22RB212





BEDIENINGSORGANEN

- 1 FM (SK-A)
- 2 Kortegolf (SK-B)
- 3 Langegolf (SK-D)
- 4 Middengolf I (SK-E)
- 5 Middengolf II (R43)
- 6 Klank (C1,3,5,7)
- 7 Afstemming (R44+SK-F)
- 8 Geluidssterkte + aan/uit

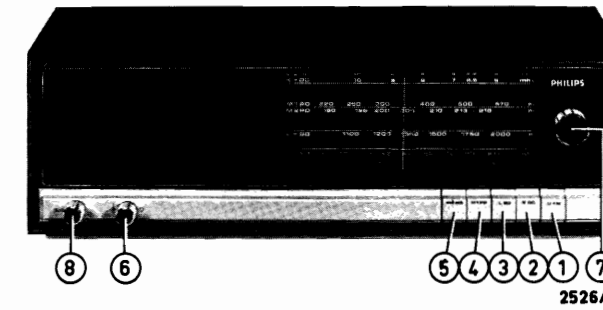

BESTELNUMMERS

Kast	4822 425 50097	S1,2,3,4	4822 158 60295	C27	4822 122 30007
Voet	4822 462 70898	S5,6	4822 156 60053	C28	4822 122 30007
Frontplaat, compleet /00	4822 426 50138	S7,8,9	4822 156 30079	C31	4822 121 50101
Frontplaat, compleet /22	4822 426 50138	S10	4822 157 40045	C35	4822 122 30097
Smeltveiligheidshouder	4822 256 30108	S11	4822 157 40097	C42	4822 121 50414
Knop (klank, geluidssterkte)	4822 413 40527	S12,13	4822 156 40544	C43	4822 122 30093
Knop (afstemming)	4822 413 40528	S14,15	4822 153 50092	C44	4822 121 50414
Klemveer knop	4822 532 10284	S16,17	4822 153 50033	C45	4822 121 50472
Druktoets LG	4822 410 40045	S18,19	4822 153 50033	C47	4822 124 20567
Druktoets KG	4822 410 40046	S20,21,22	4822 156 30153	C48	4822 124 20387
Druktoets FM	4822 410 40047	S23,24,25	4822 156 30343	C51	4822 122 30093
Druktoets MG1	4822 410 40044	S26,27,28	4822 156 30244	C52	4822 121 50437
Druktoets MG2	4822 410 40043	S29,30,31	4822 156 30244	C53	4822 122 30097
Schuifschakelaar (4x)	4822 277 30536	S32	4822 157 40044	C54	4822 121 50032
Schuifschakelaar (6x)	4822 277 30537	S33,34,35	4822 153 50031	C55	4822 125 50026
Schuifschakelaar (8x)	4822 277 30535	S36,37,38	4822 153 50032	C56	4822 122 31196
Koppelstuk	4822 404 20131	S39,40,41	4822 153 10101	C63	4822 122 30011
Schuif van schuifschakelaar MG1 (2x)	4822 278 30086	S42	4822 157 40044	C64	4822 122 30104
Geleidsplaatje van schuifschakelaar MG1	4822 466 90684	S50	4822 240 50059	C71	4822 124 20351
Steker, antenne AM	4822 264 30042	S51,52,53,54	4822 145 40122	C75	4822 124 20402
Steker, antenne FM	4822 264 30043	R39	4822 110 61187	C78	4822 124 20341
Steker (5polig)	4822 264 40028	R43	4822 101 20371	C83	4822 124 20377
Snaarwiel (afstemcondensator)	4822 528 80358	R44	4822 100 50008	C84	4822 124 20341
Snaarwiel Ø 20	4822 528 80155	R55	4822 116 30082	C85	4822 124 20402
Snaarwiel Ø 14	4822 528 80186	R56	4822 111 30013	C86	4822 122 30094
Wijzer	4822 450 80398	R62	4822 110 61174	C87	4822 121 40104
Aandrijfsnaar	4822 321 30132	C1-8	4822 125 40014	C88	4822 124 20402
Veer, geïntegreerde S3-schakelaar	4822 492 61741	C9-11	4822 125 50029	C89	4822 124 40423
Brons afstandsstukje, geïntegreerde S3-schakelaar	4822 404 10152	C10	4822 122 30016	C93	4822 122 30004
Aansluitbus (antenne)	4822 267 40129	C13	4822 122 30057	C94	4822 122 30016
Aansluitbus (PU)	4822 267 40201	C17,21	4822 122 30097	LA1	4822 134 40003
Lamphouder	4822 255 10007	C22	4822 122 30019	VL1	4822 253 30017
Schaal /00	4822 333 40185	C23	4822 122 30017	VL2	4822 252 20007
Schaal /22	4822 333 40187	C24	4822 122 30034		
		C25	4822 122 30011		

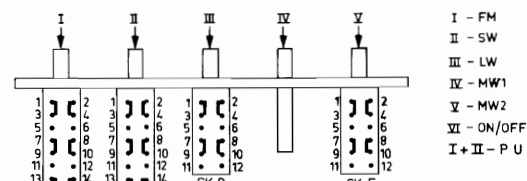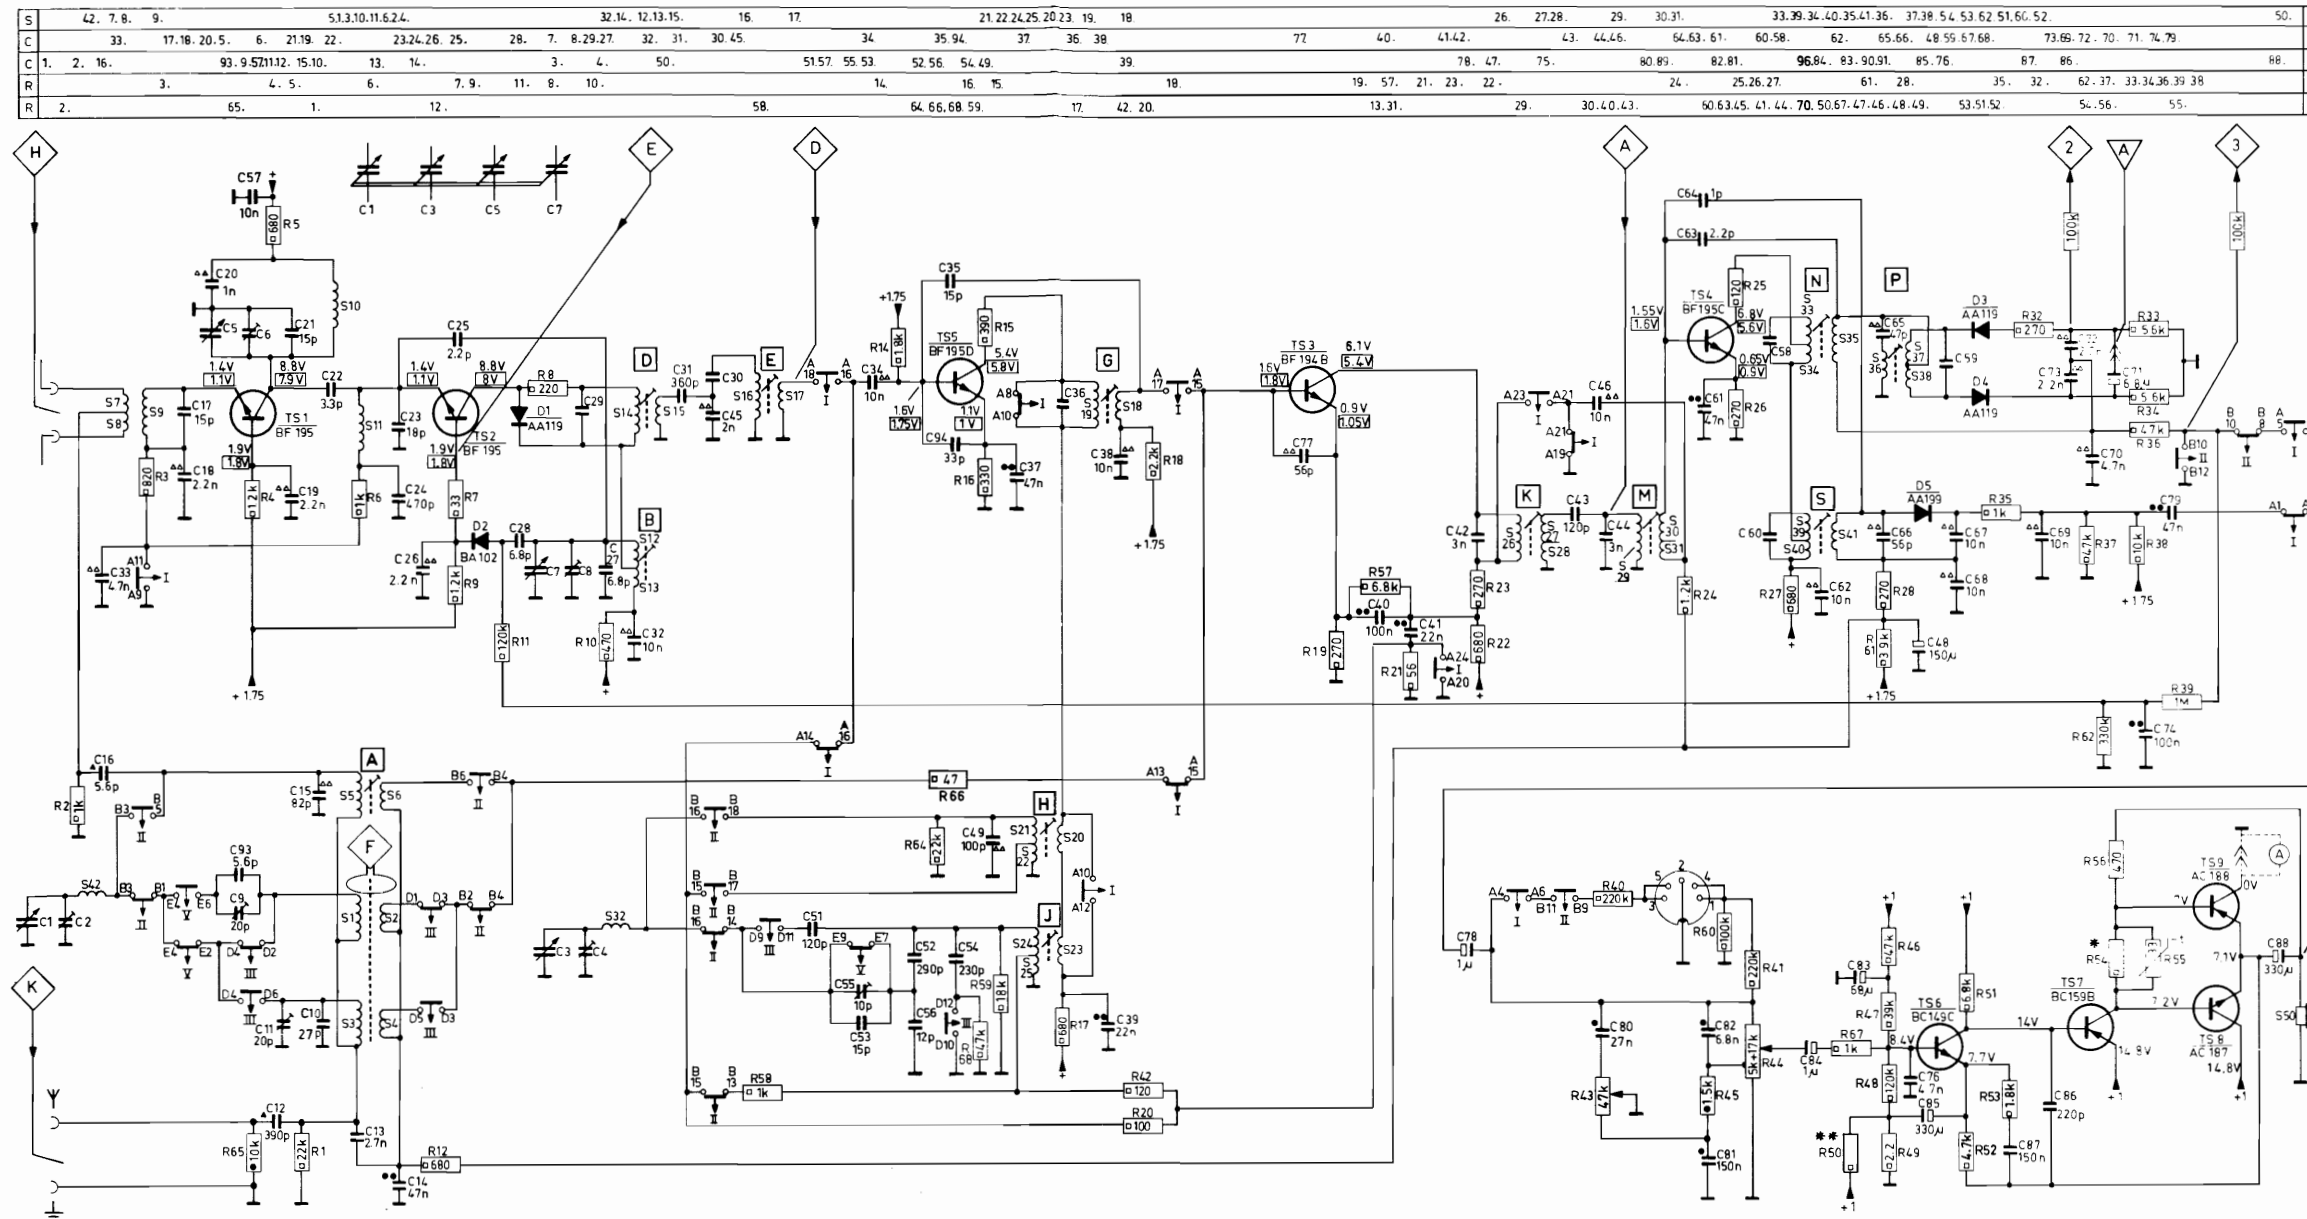


- I - FM
- II - SW
- III - LW
- IV - MW1
- V - MW2
- VI - ON/OFF
- I+II - P U



- SK-A
- SK-B
- SK-C
- SK-D
- SK-E

+	R31
7.8 - 8.1 V	240
8.1 - 8.4 V	180
8.4 - 8.7 V	120
+ Measured	
<< B/open	

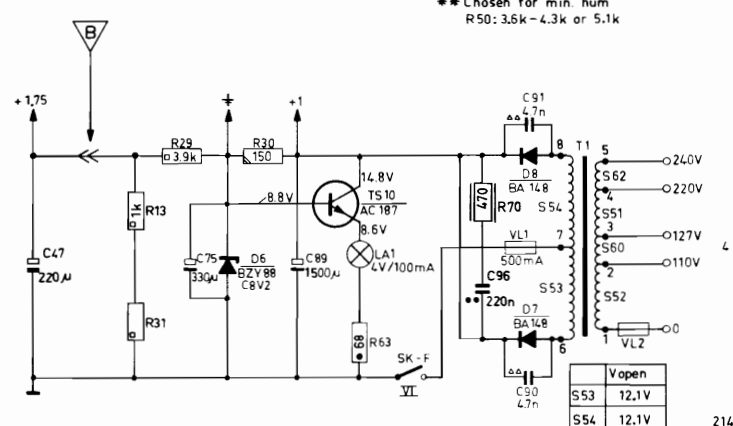

2145 D

Voor verdere gegevens en trimvoorschriften wordt verwezen naar de volledige servicedocumentatie.

22RB212

S	K. P. 42. M. G. S. 32. N. H. A. J. 42.										E.	7.8.9. E. D. 10.	11.	S
C	84.	83.	76.	78.	34. 39. 37.			14. 49. 13. 15.	51. 54. 52. 53. 16. 56.	55. 11.	10. 57.	93. 9.	C	
C	88. 86.	87.	79. 85.	43. 42. 77. 44. 35. 94. 40. 46. 38. 41.	69.	67. 70. 65. 66. 64. 63.	61. 62.	74.	1 ÷ 8.	21. 20. 19. 18. 17. 32. 27. 23. 24. 26. 22. 33.	45. 31.	28. 25.	C	
C	91. 90.	89.	72. 71. 68. 73.	20.	66. 16. 40.	1. 58. 59. 42.		68.					R	
R	46.	47. 67. 50. 48. 49.	41. 60.	14. 19. 23. 57. 15. 26. 24. 22. 21. 18. 12. 64. 61.			17.	2. 5. 10.		3. 9. 4. 6.			R	
R	63. 54. 56. 55.	51. 52. 53.	39. 38. 33. 36. 32. 28. 37. 34. 35. 25.			27.	29. 30. 31. 13.	62.	8. 11. 7.				R	

