

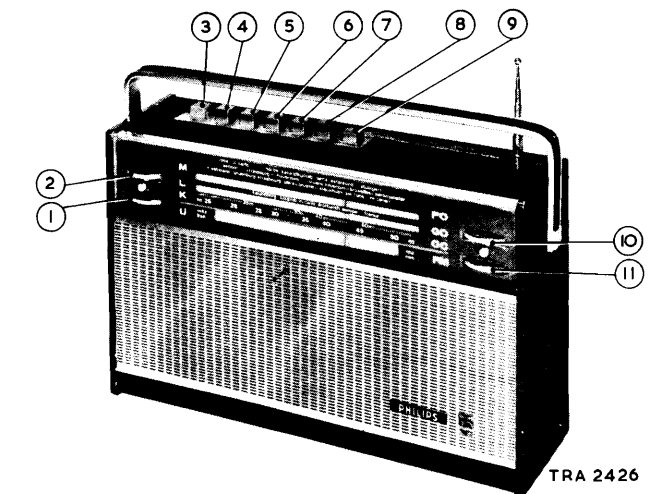
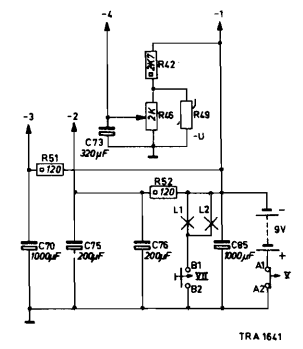




servicegegevens

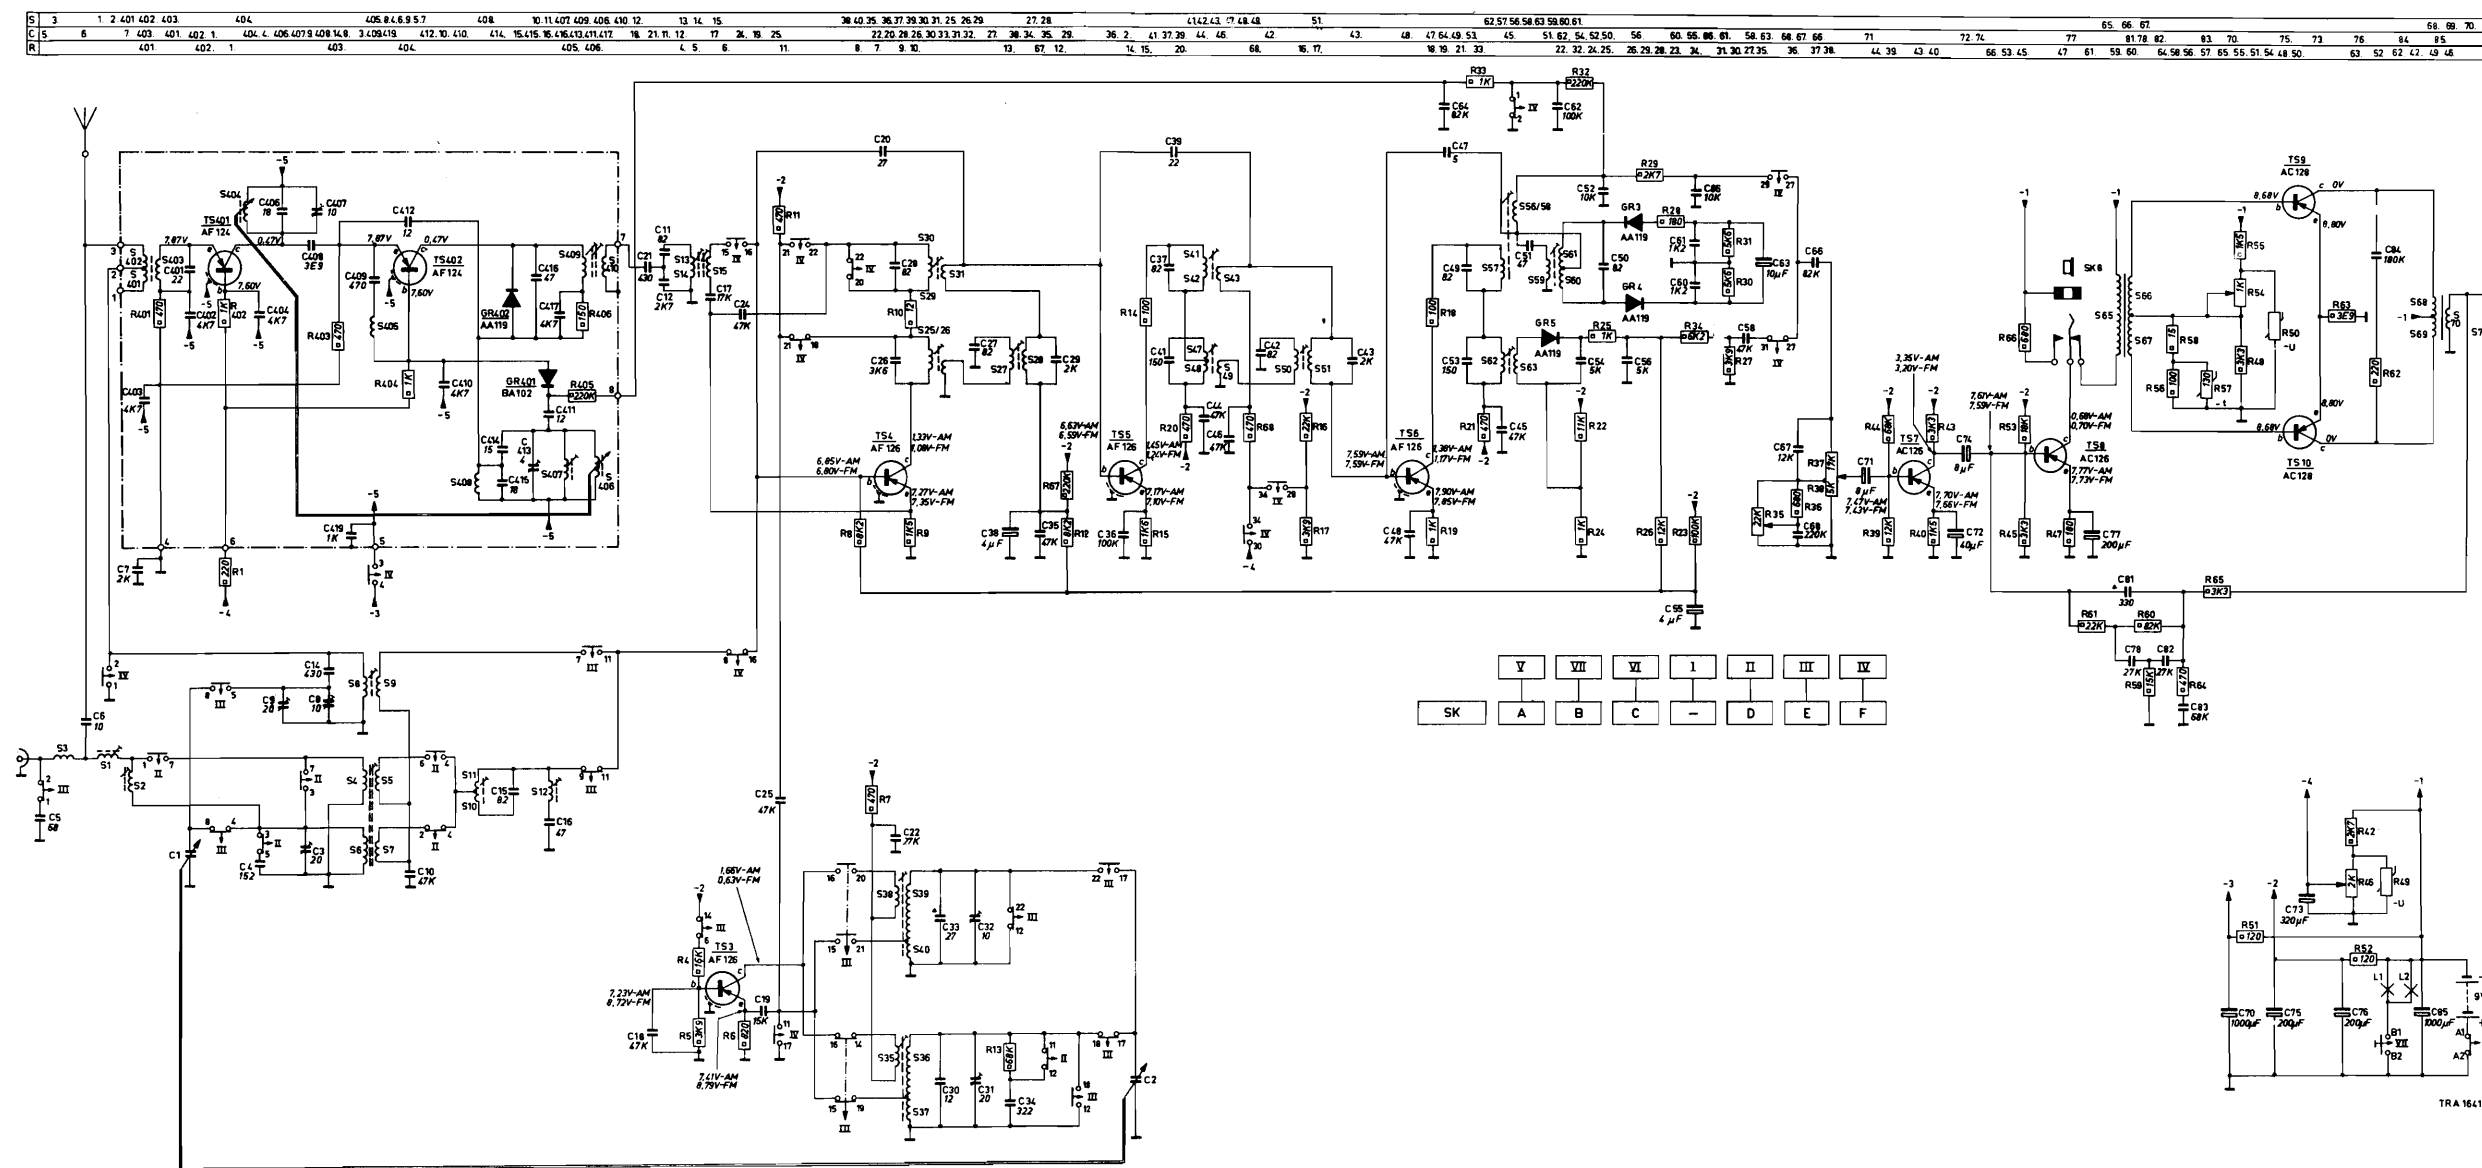

BEDIENINGSORGANEN

- 1 Geluidssterkte (R37, 38)
- 2 Klank (R35)
- 3 Aan/uit (SK-V)
- 4 Schaalverlichting (SK-VII)
- 5 A. F. R. -schakelaar (SK-VI)
- 6 Langegolf (SK-I)
- 7 Middengolf (SK-II)
- 8 Kortegolf (SK-III)
- 9 FM (SK-IV)
- 10 Afstemming AM (C1-C2)
- 11 Afstemming FM (S404-S406)



CODENUMMERS

Kast	4822 423 10024	S1	4822 157 10027
Front	4822 458 40113	S2	4822 157 10028
Achterwand	4822 422 50009	S3	4822 157 40025
Batterijdeksel	4822 423 40155	S4, 5, 6, 7	4822 158 60078
Handgreep	4822 498 40191	S8, 9	4822 156 40078
Pen bevestiging handgreep	4822 535 90329	S10, 11, C15	4822 153 10085
Sierstrip rond druktoets	4822 459 50083	S12, C16	4822 153 10081
Druktoets	4822 410 20466	S13, 14, 15, C11	4822 153 50033
Druktoets (rood)	4822 410 20394	S25, 26	4822 156 40103
Druktoetsseenheid	4822 276 70023	S27, 38, C27	4822 153 10104
Knop (geluidssterkte)	4822 413 50496	S29, 30, 31, C28	4822 153 50033
Knop (klank)	4822 413 50491	S35, 36, 37	4822 156 30104
Knop (afstemming, AM, FM)	4822 413 50514	S38, 39, 40	4822 156 30143
FM-eenheid	4822 210 10069	S41, 42, 43	4822 153 50033
Telescoopantenne	4822 303 30022	S47, 48, 49, C41	4822 153 10083
Lamphouder	4822 255 10007	S50, 51, C42	4822 153 10104
Batterijveer " - "	4822 492 50363	S56, 57, 58, C49	4822 153 50031
Batterij-contactplaat " + "	4822 492 50406	S59, 60, 61, C50	4822 153 50032
Schuifschakelaar MG (SK-D)	4822 277 30167	S62, 63, C53	4822 153 10105
Loper van schakelaar MG	4822 278 20054	S65, 66, 67	4822 142 40116
Schuifschakelaar KG (SK-E)	4822 277 30168	S68, 69, 70	4822 140 60082
Loper van schakelaar KG	4822 278 20055	S401, 402, 403	4822 156 30079
Schuifschakelaar FM (SK-F)	4822 277 30169	S405	4822 157 50045
Loper van schakelaar FM	4822 278 20185	S408	4822 157 50094
Pen bevestiging loper van schakelaar	4822 535 90114	S407	4822 156 20205
Trommel op C1, C2	4822 528 40048	S409, 410, C416	4822 153 50035
Stekerbuisantenne	4822 267 30079	S71	4822 240 20014
Oortelefoonaansluiting	4822 267 30043	R35	4822 101 20069
Moer bevestiging oortelefoonaansluiting	4822 505 10043	R37, 38	4822 101 30058
Schaalachtergrond	4822 480 30044	C1, 2	4822 125 20069
Schaal (EUR)	4822 333 50167		
Schaalverlichtingslamp	4822 134 40005		

Voor verdere gegevens en trimvoorschriften wordt verwezen naar de volledige servicedocumentatie.

C3, 9, 31	4822 125 50029	C63	4822 124 20077
C4	4822 121 50019	C64	4822 121 40058
C5	4822 122 30023	C66	4822 121 40058
C6, 8	4822 122 30006	C67	4822 121 40048
C7, 29, 43	4822 122 30009	C68	4822 121 40061
C10	4822 122 30025	C70, 85	4822 124 20116
C12	4822 121 50083	C71, 74	4822 124 20091
C14, 21	4822 121 50051	C72	4822 124 20083
C17, 18, 24, 25, 35, 44, 45, 46, 48, 58	4822 121 40055	C73	4822 124 20117 +
C19	4822 121 40049		4822 462 70231
C20	4822 122 30045	C75, 76, 77	4822 124 20072
C22, 78, 82	4822 121 40006	C83	4822 121 40057
C26	4822 121 50088	C402, 403, 404, 410, 417	4822 122 40002
C30, 411, 412	4822 122 30018	C406, 415	4822 122 30017
C32, 407	4822 125 50026	C408	4822 122 30003
C34	4822 121 50043	C409	4822 122 30043
C36	4822 121 40059	C413	4822 125 50006
C38, 55	4822 124 20088	C414	4822 122 30029
C39, 401	4822 122 30022	C419	4822 122 30027
C47	4822 122 30033	R46	4822 100 10027
C51	4822 122 30008	R49, 50	4822 116 20063
C52, 86	4822 121 40047	R54	4822 100 10021
C54, 56	4822 122 90001	R57	4822 116 30016
C60, 61	4822 122 30027		
C62	4822 122 30026		

S:	B.	406.	C.	408.	405.	404.	A.
C:	419.	413.	414.	411.	417.	415.	412.
R:	405.	406.	404.	403.	407.	409.	408.
							405.
							403.
							404.
							401.

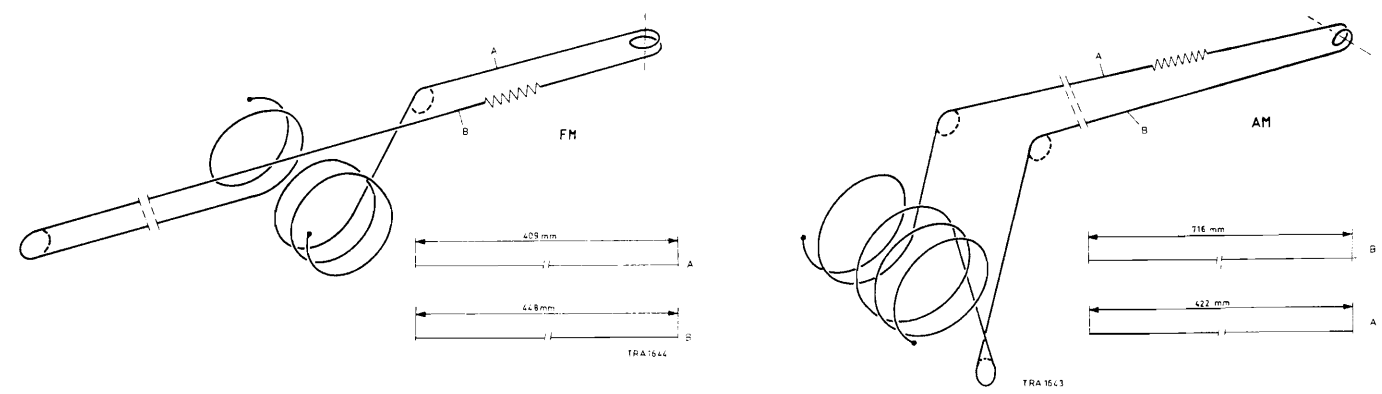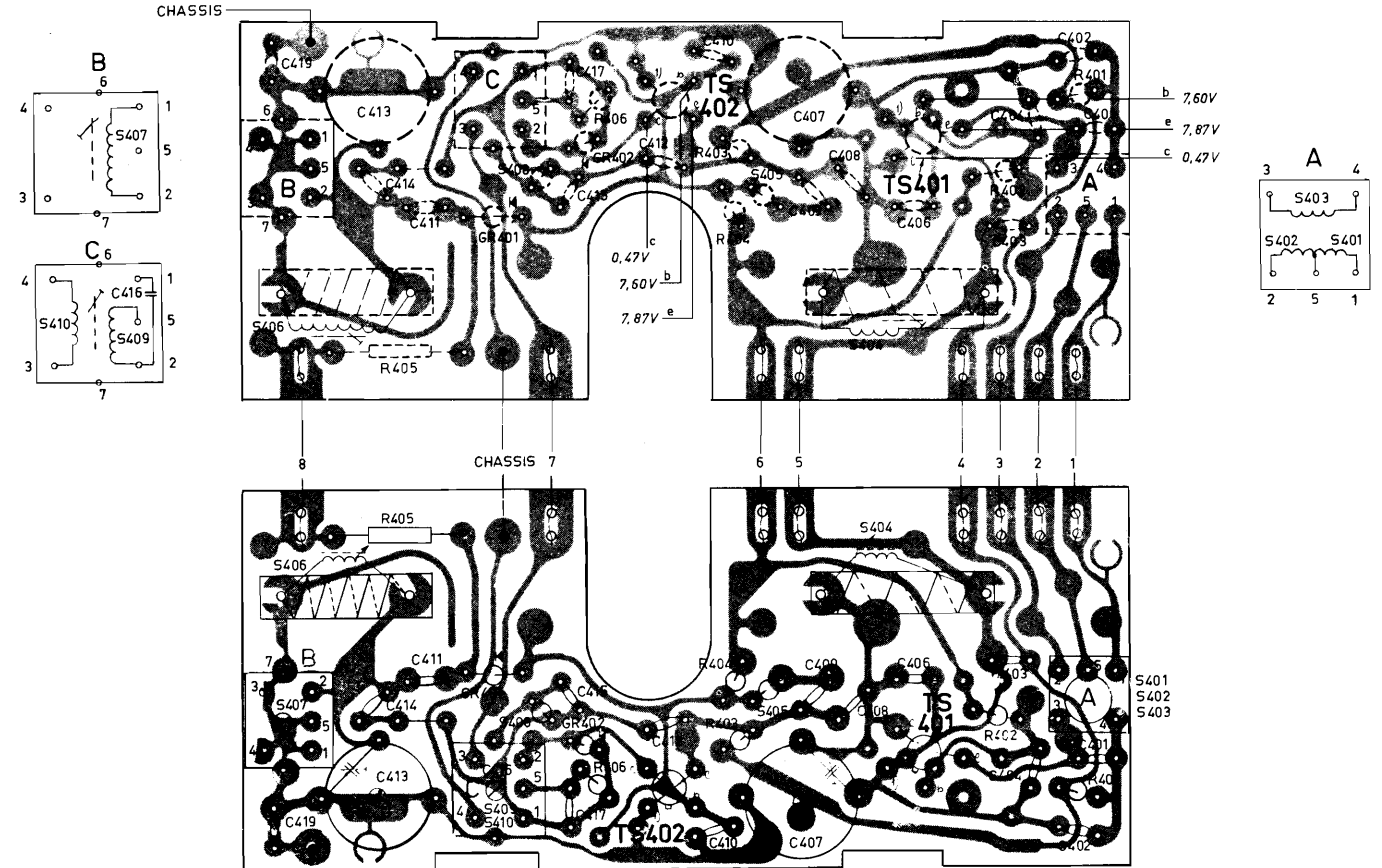

S:	D.	3.	Q.R.C.P.F.E.A.N.O.L.B.G.H.M.	J.K.	65.66.68.69.67.70.
C:	21.12.62.60.63.64.61.76.17.54.56.86.55.25.51.52.58.45.36.24.14.8.47.43.44.10.20.35.9.5.46.39.26.48.29.38.33.32.47.6.75.19.3.22.18.31.30.34.68.72.84.	66.67.77.73.	82.74.71.78.	83.	81.
R:	33.30.31.34.28.25.27.32.17.11.16.26.29.24.23.8.22.12.21.20.15.9.18.67.4.10.68.19.14.7.52.66.63.51.6.5.	13.39.	40.44.36.	43.62.	47.53.55.49.58.50.42.57.65.61.64.45.56.48.59.60.54.46.

