


R	221, 2, 3, 228, 223, 222, 1, 224, 225, 6, 5, 226, 227, 11, 9, 4, 10, 8, 28, 13, 75, 12, 29, 17, 20, 16, 14, 7, 10, 21, 23, 39, 30, 25, 24, 19, 31, 22, 32, 66, 67, 33, 26, 36, 27, 38, 40, 37, 41, 42, 54, 43, 54, 63, 61, 51, 53, 62, 44, 45, 47, 50, 49, 48, 51, 51, 59, 55, 56, 57, 58,
C	26, 27, 31, 32, 87, 23, 24, 234, 227, 222, 223, 13, 14, 15, 16, 7, 225, 3, 4, 5, 6, 226, 227, 233, 231, 232, 1, 37, 230, 229, 40, 105, 214, 43, 38, 2, 28, 29, 30, 8, 9, 10, 11, 12, 17, 16, 13, 20, 21, 35, 36, 39, 46, 48, 45, 42, 47, 46, 50, 54, 53, 51, 57, 59, 55, 62, 58, 50, 102, 101, 61, 65, 68, 64, 69, 66, 67, 56, 72, 73, 70, 71, 74, 14, 75, 76, 112, 81, 30, 115, 116, 92, 93, 113, 111, 62, 81, 84, 110, 86, 85, 90, 31, 24, 97, 95, 96,
L	27, 26, 31, 30, 21, 212, 212, 8, 10, 32, 203, 2, 4, 204, 3, 5, 7, 6, 9, 11, 209, 205, 205, 206, 207, 13, 15, 12, 19, 21, 12, 14, 15, 16, 20, 33, 34, 22, 35, 23, 36, 24, 37, 25, 38, 39, 40, 41,

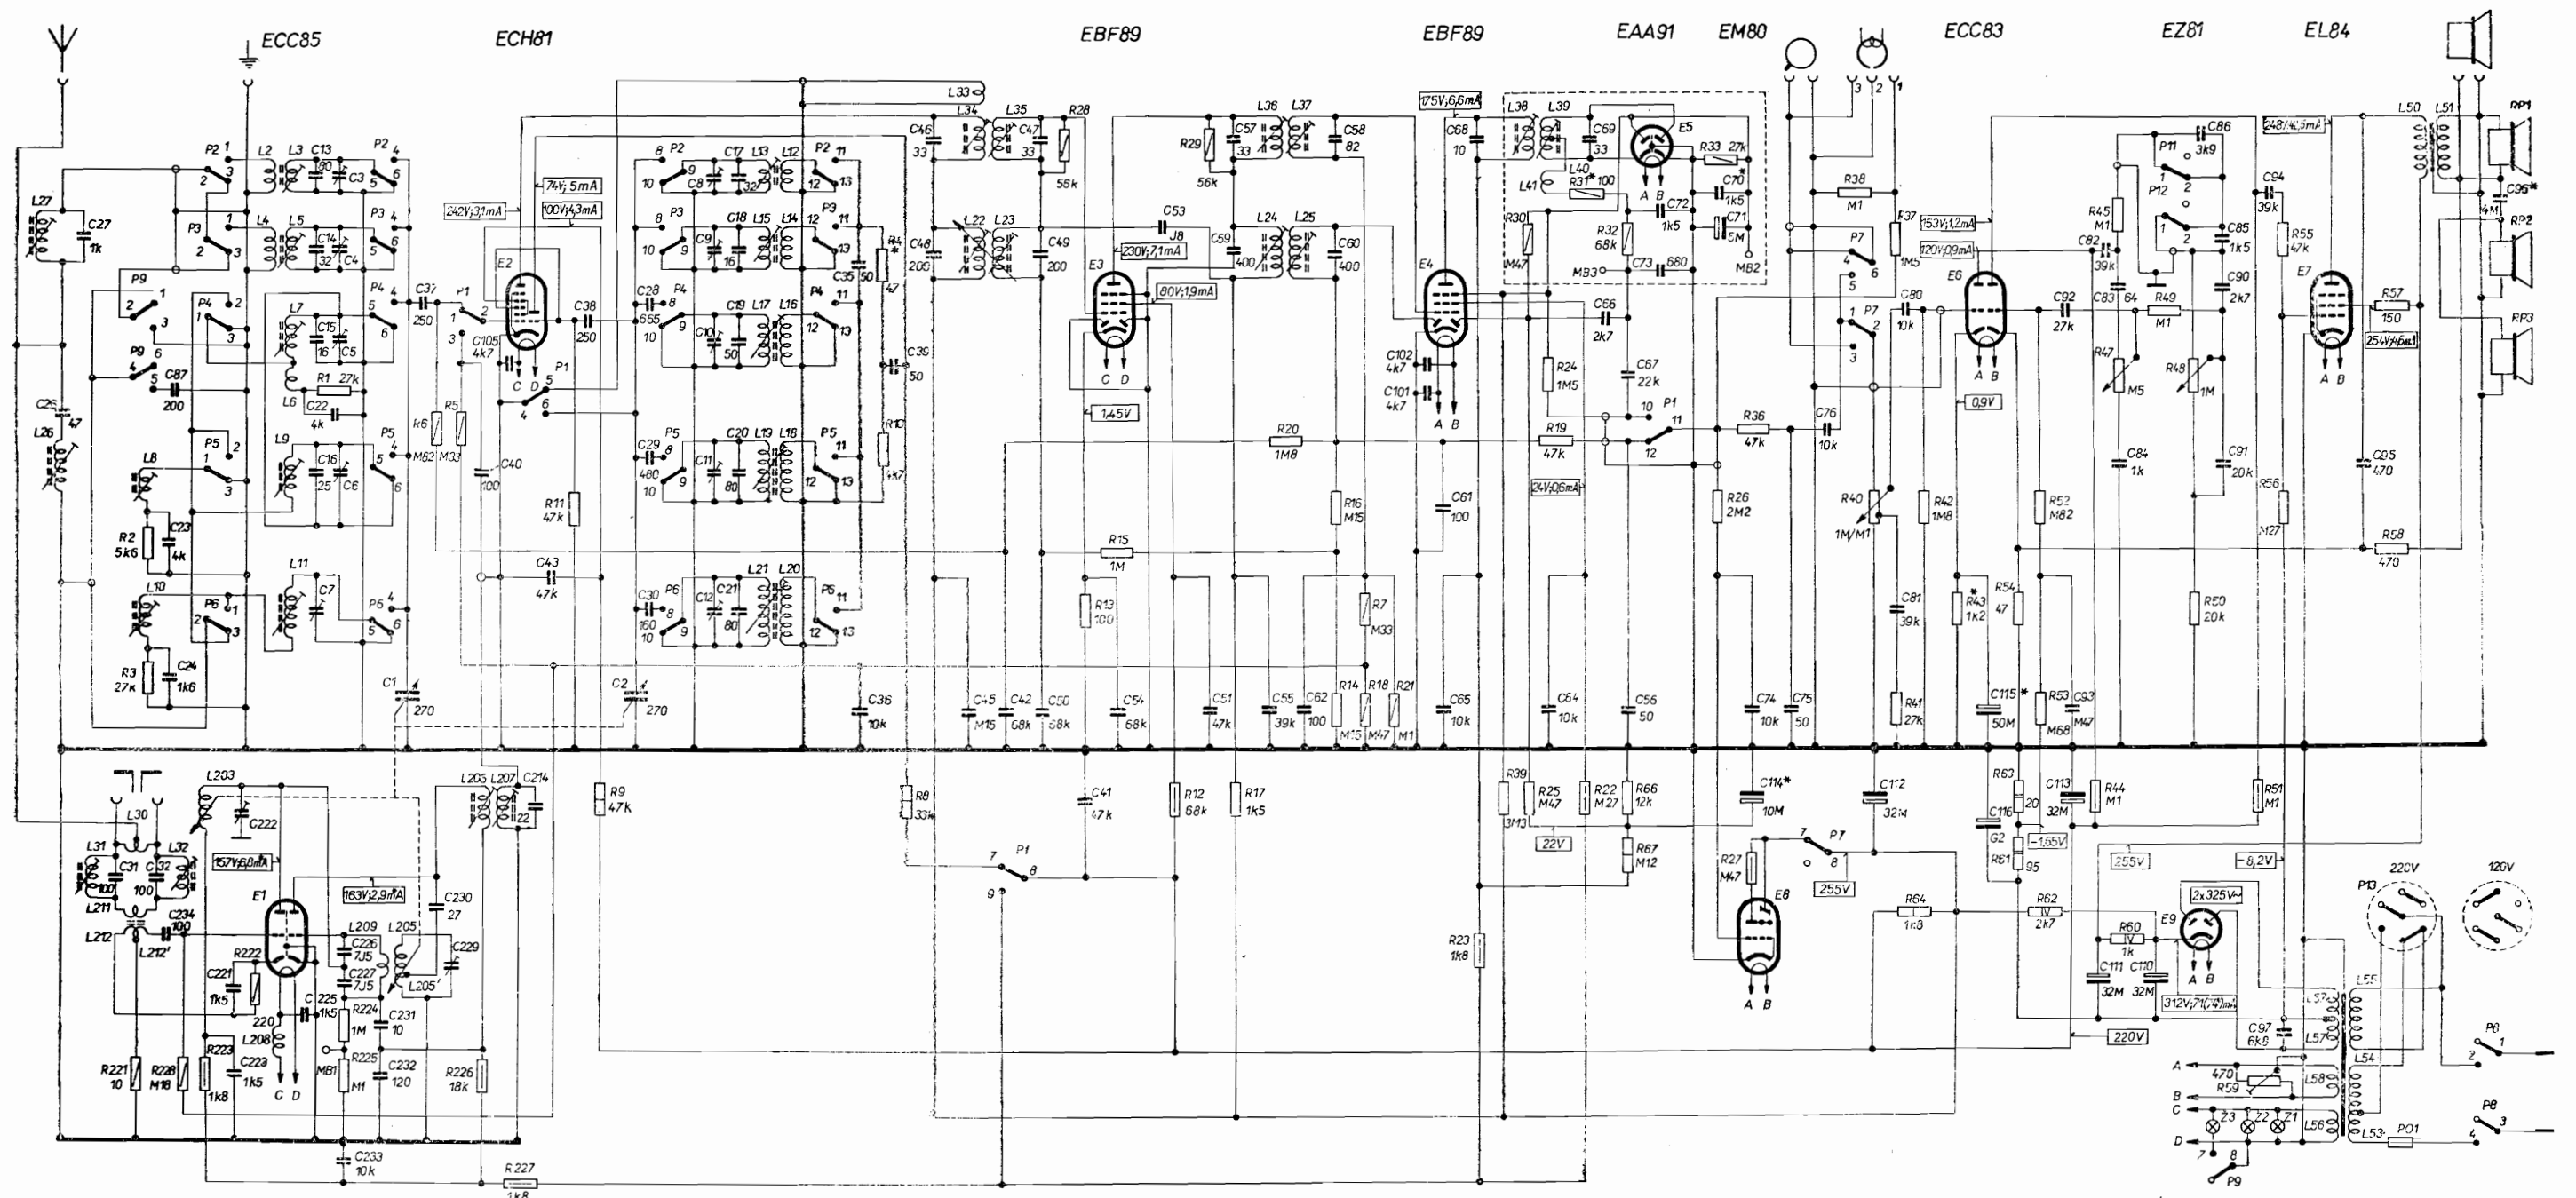

* PŘÍJÍMAČ PŘEPNUT NA VKV

TLAČÍTKOVÝ PŘEPÍNAČ P1-P8

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO: SPOJÍ SE	ROZPOJÍ SE
O	P8	1-2, 3-4,
OV	P7	1-2, 4-6, 7-8,
SV2	P5	1-3, 5-6, 9-10, 12-13,
SV1	P4	1-3, 5-6, 9-10, 12-13,
KV2	P3	1-3, 5-6, 9-10, 12-13,
KV1	P2	2-3, 5-6, 9-10, 12-13,
VKV	P1	1-2, 4-5, 7-8, 11-12,

TLAČÍTKOVÝ PŘEPÍNAČ P9-P12

TLAČÍTKO OZNACENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO: SPOJÍ SE	ROZPOJÍ SE
REC	P12	1-2,
SOLO	P11	1-2,
ORCH.	P10	1-2,
FERRIT	P9	2-3, 4-5, 7-8, 11-12,

Zapojení přijímače 627A „VARLACE“